

TISD Ceiling Mounted Projector Lamp Life Instructions

To Check Bulb Status on Ceiling Projector

- 1) Press Menu Button Remote
- 2) Arrow to right to the “i” inside the white speech bubble (information tab)
- 3) Press Enter

INFORMATION:	
<i>First Column (Lamp Time Usage Left)</i>	<i>Second Column (Approximate Hours Burned)</i>
Input	Computer 1
Resolution	1024 X 768

Press Menu TWICE to exit back to normal viewing