

How to use classroom speaker

Each instructor will need to follow these steps daily before class begins

1. Turn ON speaker with the switch on bottom of speaker

2. Move Roger Touchscreen to top of speaker and press Connect button

3. The touchscreen will indicate that the speaker is connected. While wearing the touchscreen the instructors voice will now go through speaker and to student receivers

4. At the conclusion of class Turn OFF speaker with switch on bottom of speaker

