

How to “Unlock” Your Chromebook

If your Chromebook will not turn on, it may be “PowerLocked.” This happens when it is stacked with another Chromebook and the magnets inside lock.

If this happens, here is what to do:

1. Plug it in to power. Power light should go to orange.
2. Pull out power cord gently. Light will change to white.
3. Power on and log in.
4. You may now re-plug in, if needed