

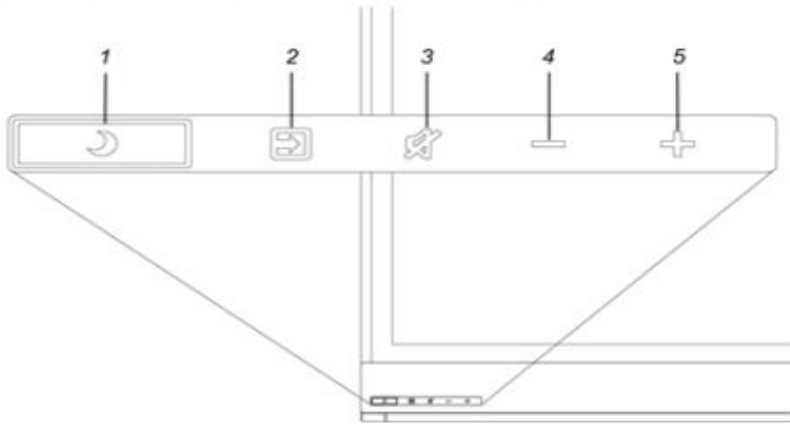
Instructor/Renter use of SMART TV:

Log in as Alex-guest to our WiFi network.



There are HDMI ports on the left hand side of the SMART TV monitor (same kind that would be on a TV or computer). You will need a cord to plug in from the laptop to SMART TV. Hit the "Inputs" button (second button over on the front of the TV screen), you can pick which input you want.

Front control panel

The front control panel contains the Standby, Input Select, Mute and volume control buttons.



No.	Name	Procedure
1	Standby	<ul style="list-style-type: none">Press to enter or exit Standby mode.Press and hold to reset the display.
2	Select	Press to switch inputs.
3	Mute	<ul style="list-style-type: none">Press to mute or unmute the volume.Press and hold to freeze and unfreeze the screen (see Freezing the screen).
4	Decrease	Press to decrease the volume.
5	Increase	Press to increase the volume.

Indicator light	Status	Procedure
Solid white	Normal operation	[N/A]
Off	Not receiving power	<ul style="list-style-type: none"> • Confirm the display's power cable is connected to the power outlet. • Flick the switch beside the AC power inlet to the ON (I) position.
Solid amber	DPMS (power management) mode	<ul style="list-style-type: none"> • Press the Standby button  to exit DPMS mode. • Connect an input source.
Slowly flashing amber	Standby mode	<ul style="list-style-type: none"> • Press the Standby button  to exit Standby mode. • If presence detection is enabled, move in range of the presence detection sensor. • If Wake to Touch is enabled, touch the screen.
Flashing amber	No USB connection from the connected computer	<ul style="list-style-type: none"> • Verify the connections to the computer. • Switch to the computer's input. <p>See Using SMART Learning Suite on connected computers.</p>
Slowly flashing white	SMART Board service not running on the connected computer	Ensure that SMART Product Drivers is installed and that the SMART Board service is running.