

How to Connect a Chromebook to a Wi-Fi Network


Before you start, you will need your Wi-Fi network name.

- If you are connecting to an open network, you will only need the network name. Remember, your information might be visible to other people on this network.
- If you are connecting to a secure network, you will need a password.


Connecting the device

Step 1: Turn on Wi-Fi


- Turn on the chromebook.
- Click on the “Settings Menu” in the bottom right corner to open the Settings menu.
- Once the Settings menu opens, click on “Network Connections”

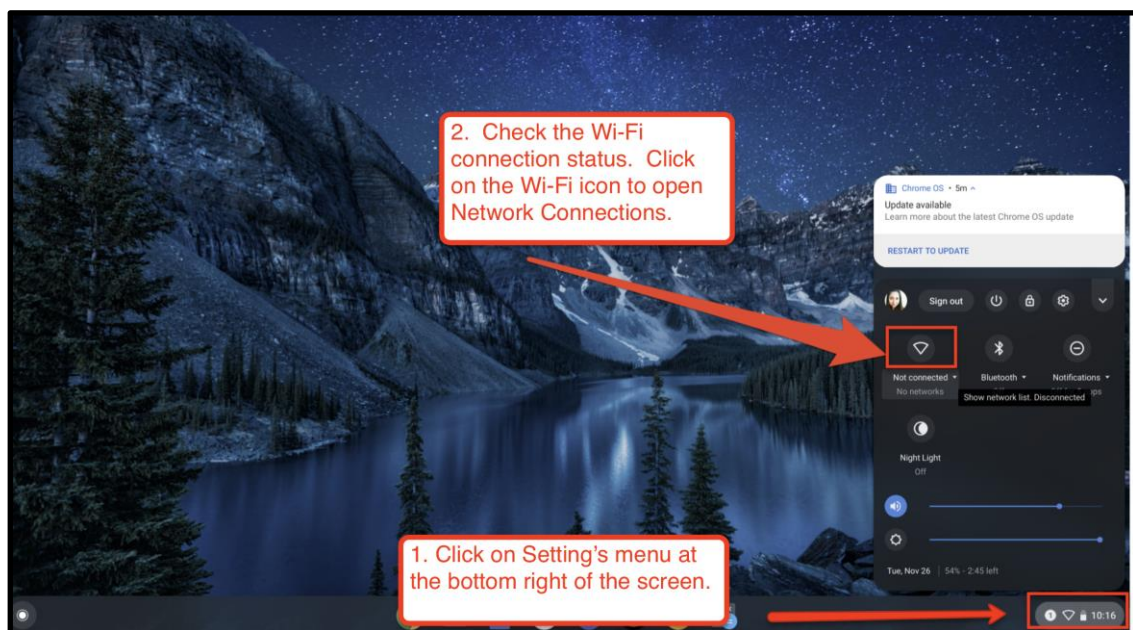

- Check to see if Wi-Fi is On or Off.
 - If Wi-Fi is off, move the toggle switch to the right to turn it on::

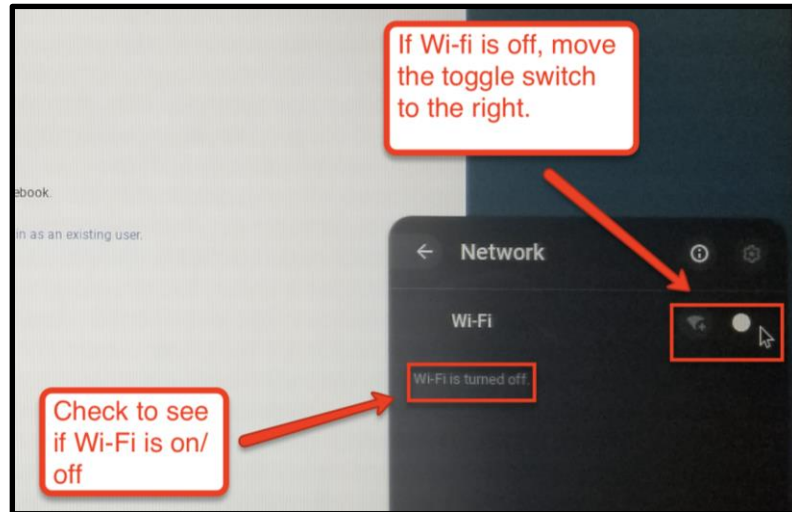

- If Wi-Fi is on, your chromebook will automatically look for available networks and show them to you in a list.

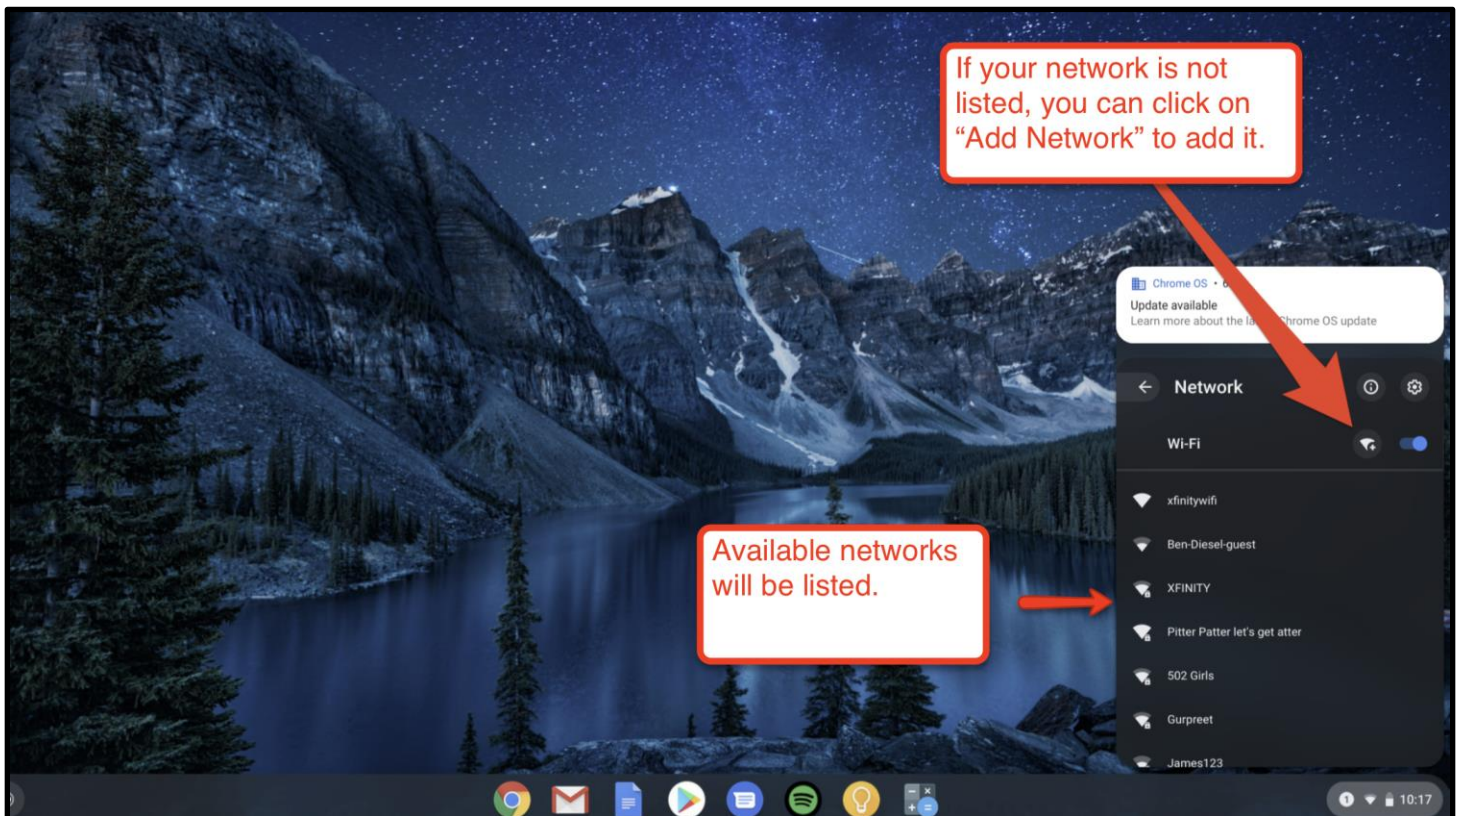


Step 2: Pick a network and connect:


- Select your Wi-Fi network from the list
 - Preferably, select a secured network (look for this icon to show it's secure):




- Enter the password if it is a secure network.

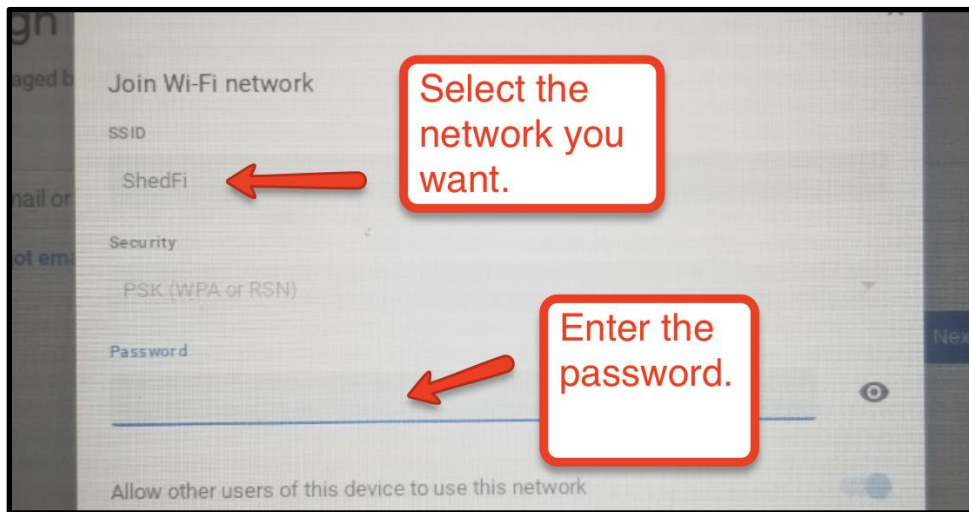

- If your network is NOT listed and you need to add it, click on the Wi-Fi button with the plus sign (next to the place where you would toggle the Wi-Fi on or off) to join another network.

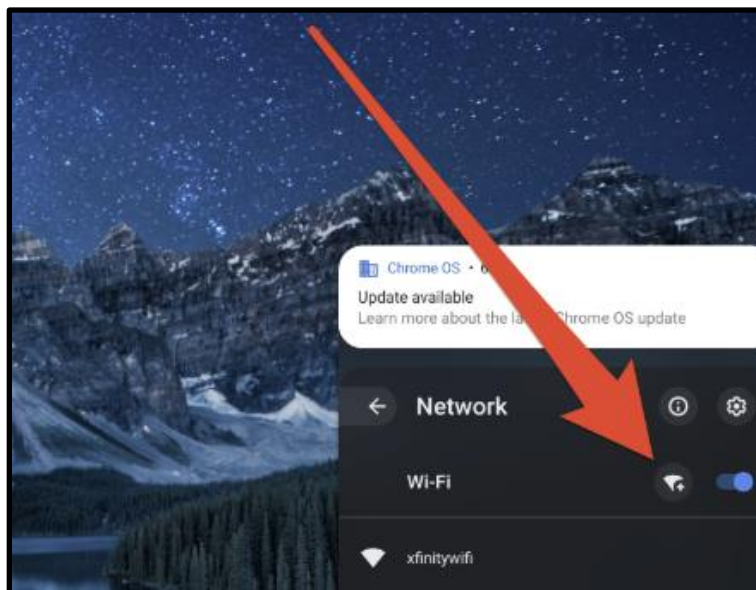

- Enter the SSID (name) of the network you want to join, then enter the password, if necessary.

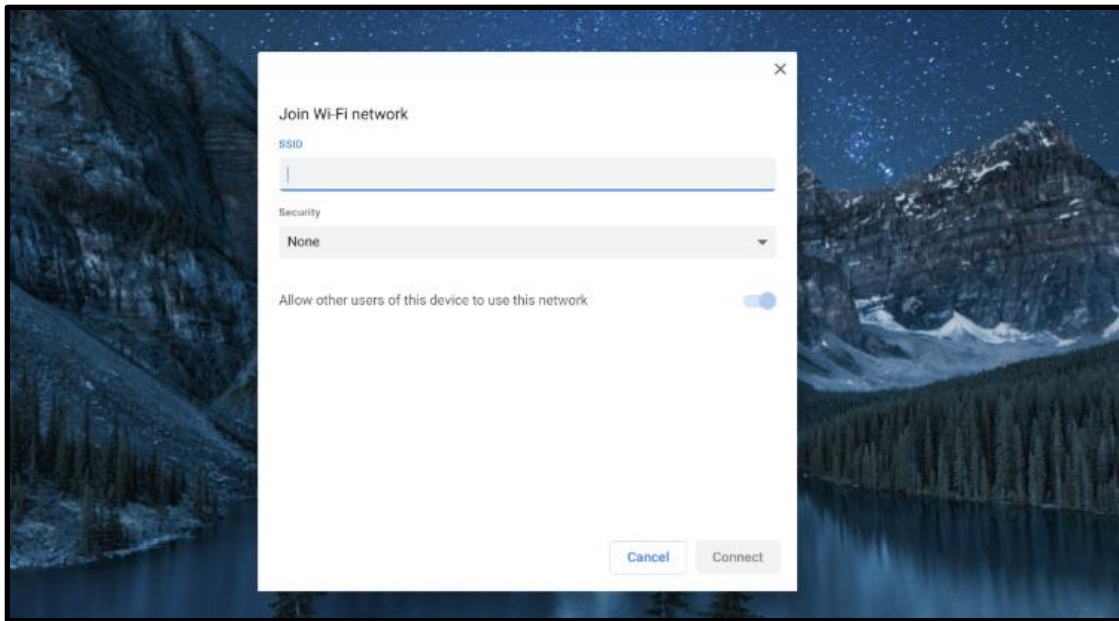

- Press “Connect”
- If you have difficulty connecting, try restarting your device.