



NEW ON SMART PANELS

Two students can write at the same time.

Erase with the soft side of your fist.

Change the input to **OPS** to use the board's features without your teacher computer.

Change the input to **HDMI 1** to view the teacher computer.

Hold down the **mute button** to freeze and unfreeze the board.

Show the **touch keyboard button** to access a keyboard on your panel.