

# MITSUBISHI THERMOSTAT OPERATION GUIDE

MITSUBISH

TEMP

MODE

ON/OFF

FAN

**WANE** 



Updates in increments of 1.0°F

#### **Current HVAC mode**

Text will display mode Heat - Cool - Fan

# Adjust Temperature

Use arrows to increase or decrease temperature setpoint – In auto the system automatically selects either heating or cooling as needed for comfort

### Change HVAC mode

User select **Auto, Cool or Heat** To disable heat cool select **Fan** Note: Selecting Dry or Setback switches system back into Auto **Current Setpoint** 

If set outside limits system will reset back within limits

#### **Fan Indicator**

System changes speed

#### Override

Button LED off when unoccupied. Press button to activate the system for 1 hour.

#### **Fan Operation**

California Title 24 Building Code 120.1(c)1 Requires that fresh air ventilation from the fan shall be supplied to each space at all times when the space is occupied.

## Vane Adjustment

Adjust vane position only on applicable uinits