



MT. DIABLO
UNIFIED SCHOOL DISTRICT



MITSUBISHI THERMOSTAT

OPERATION GUIDE

Current Temperature


Updates in increments of 1.0°F

Current Setpoint

If set outside limits
system will reset back
within limits

Adjust Temperature

Use arrows to increase or
decrease temperature
setpoint – In auto the system
automatically selects either
heating or cooling as needed
for comfort

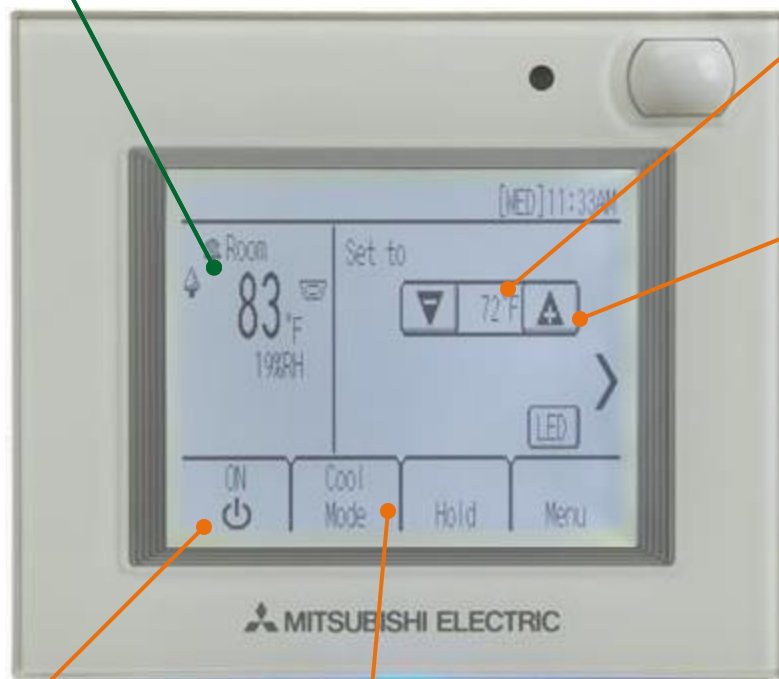

Override

Button LED off when
unoccupied. Press
button to activate the
system for 1 hour.

Change HVAC mode

User select **Auto**, **Cool** or **Heat**
To disable heat cool select **Fan**
Note: Selecting Dry or Setback
switches system back into Auto

Current HVAC mode

Text will display mode

Heat - Cool - Fan

Fan Operation

California Title 24 Building
Code 120.1(c)1 Requires that
fresh air ventilation from
the fan shall be supplied to
each space at all times when
the space is occupied.