 
 
 
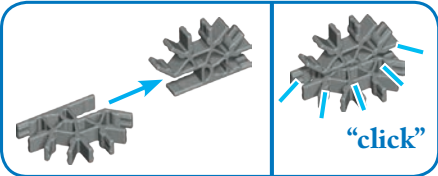 
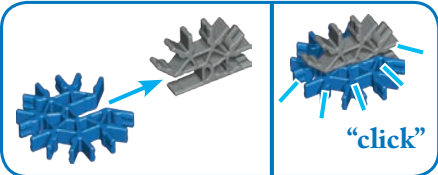 


52443 Alternate Ferris Wheel

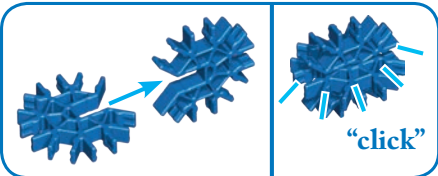


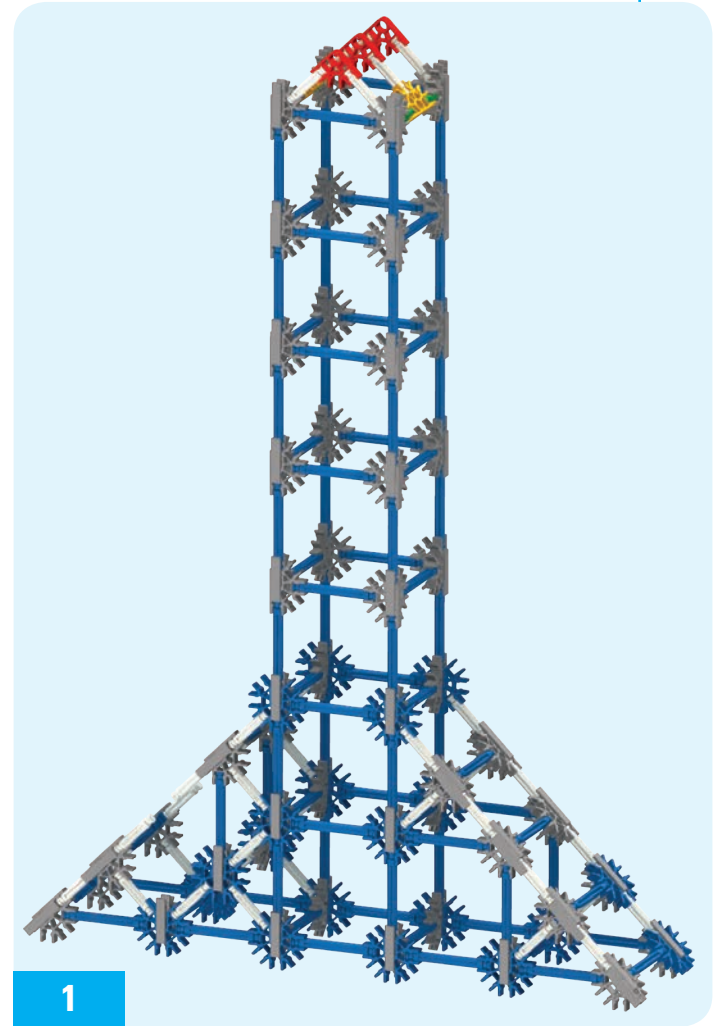





1

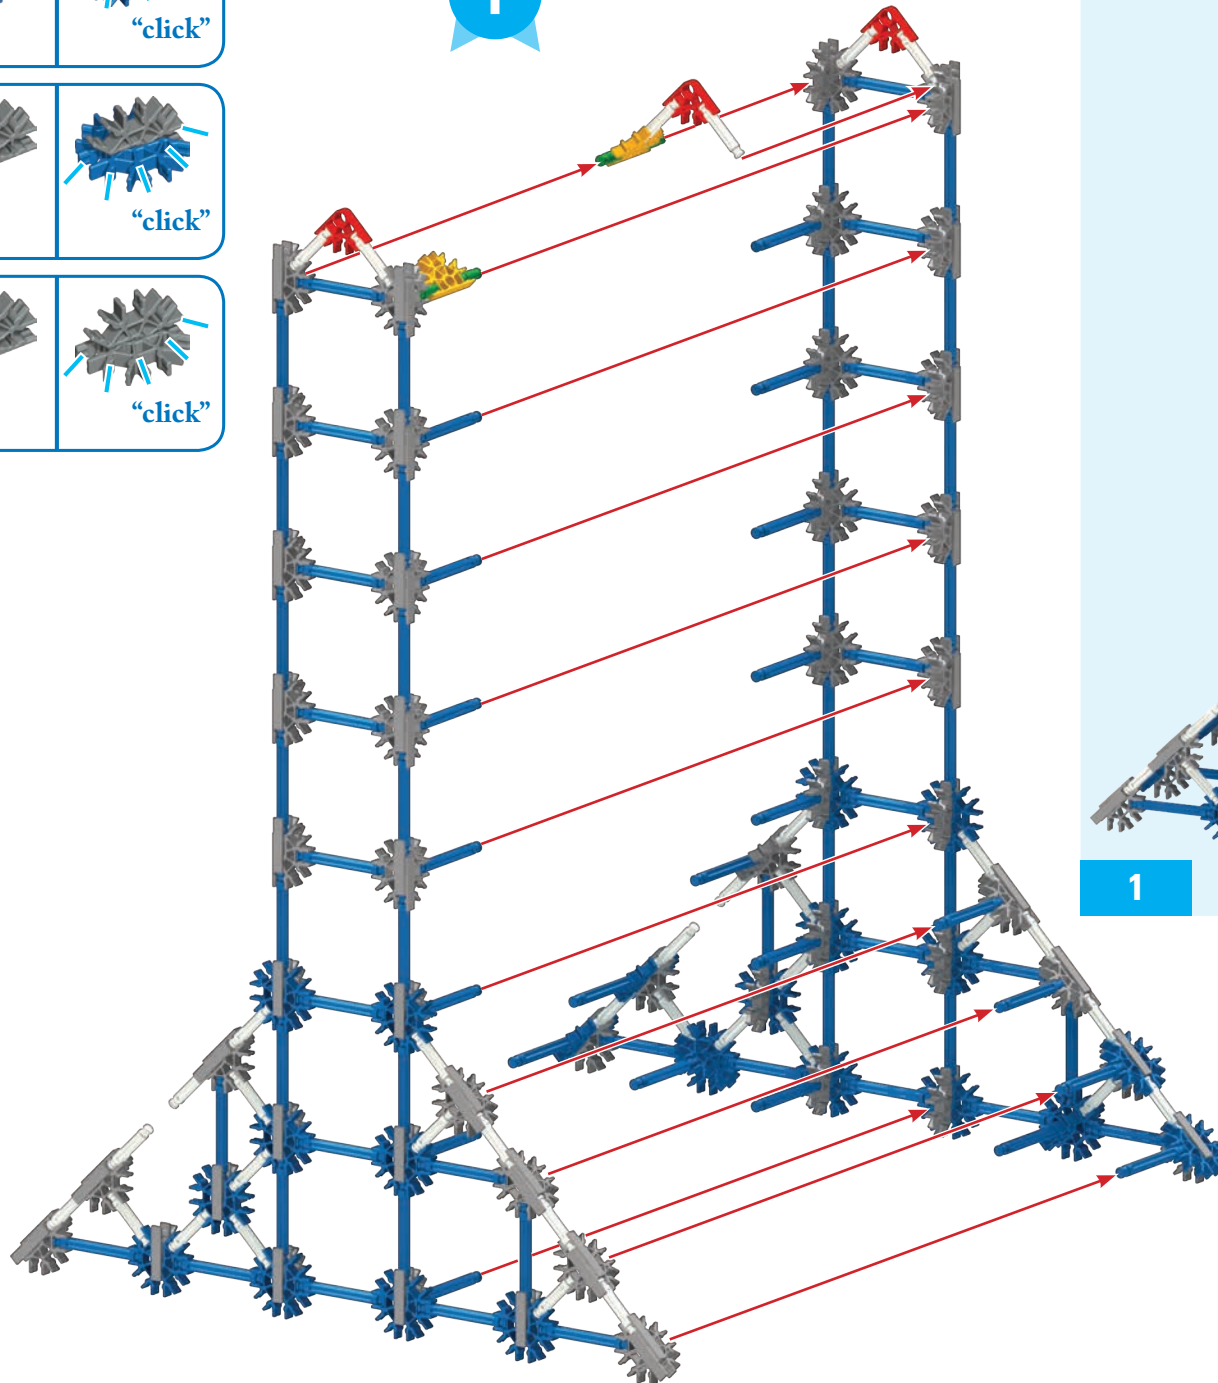



3		24		2	
4					
36					
81				80	

     Did you install 2 AA (or LR6) batteries in the motor?


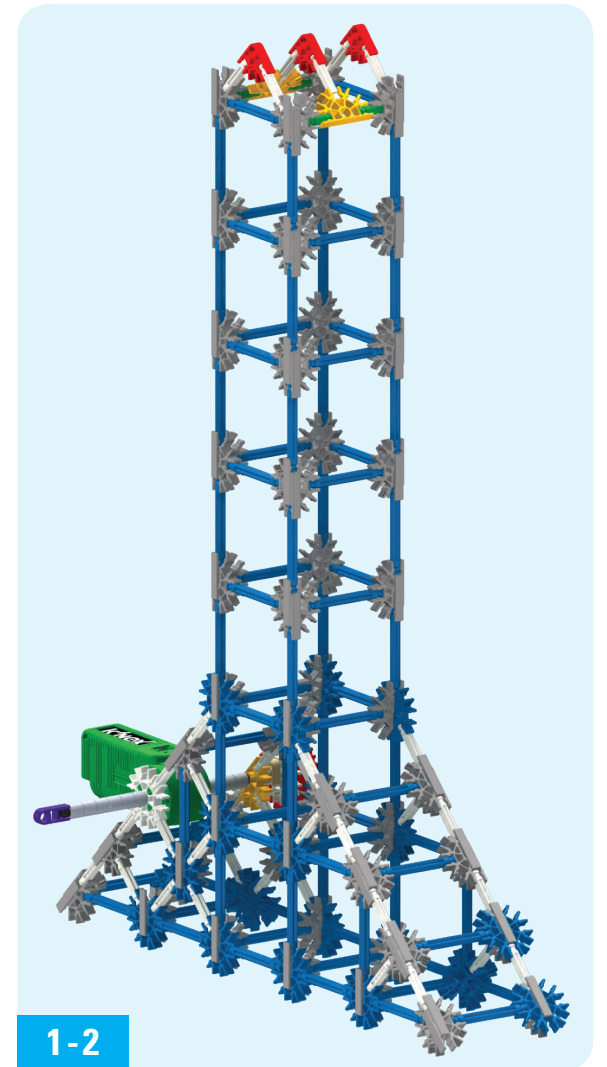
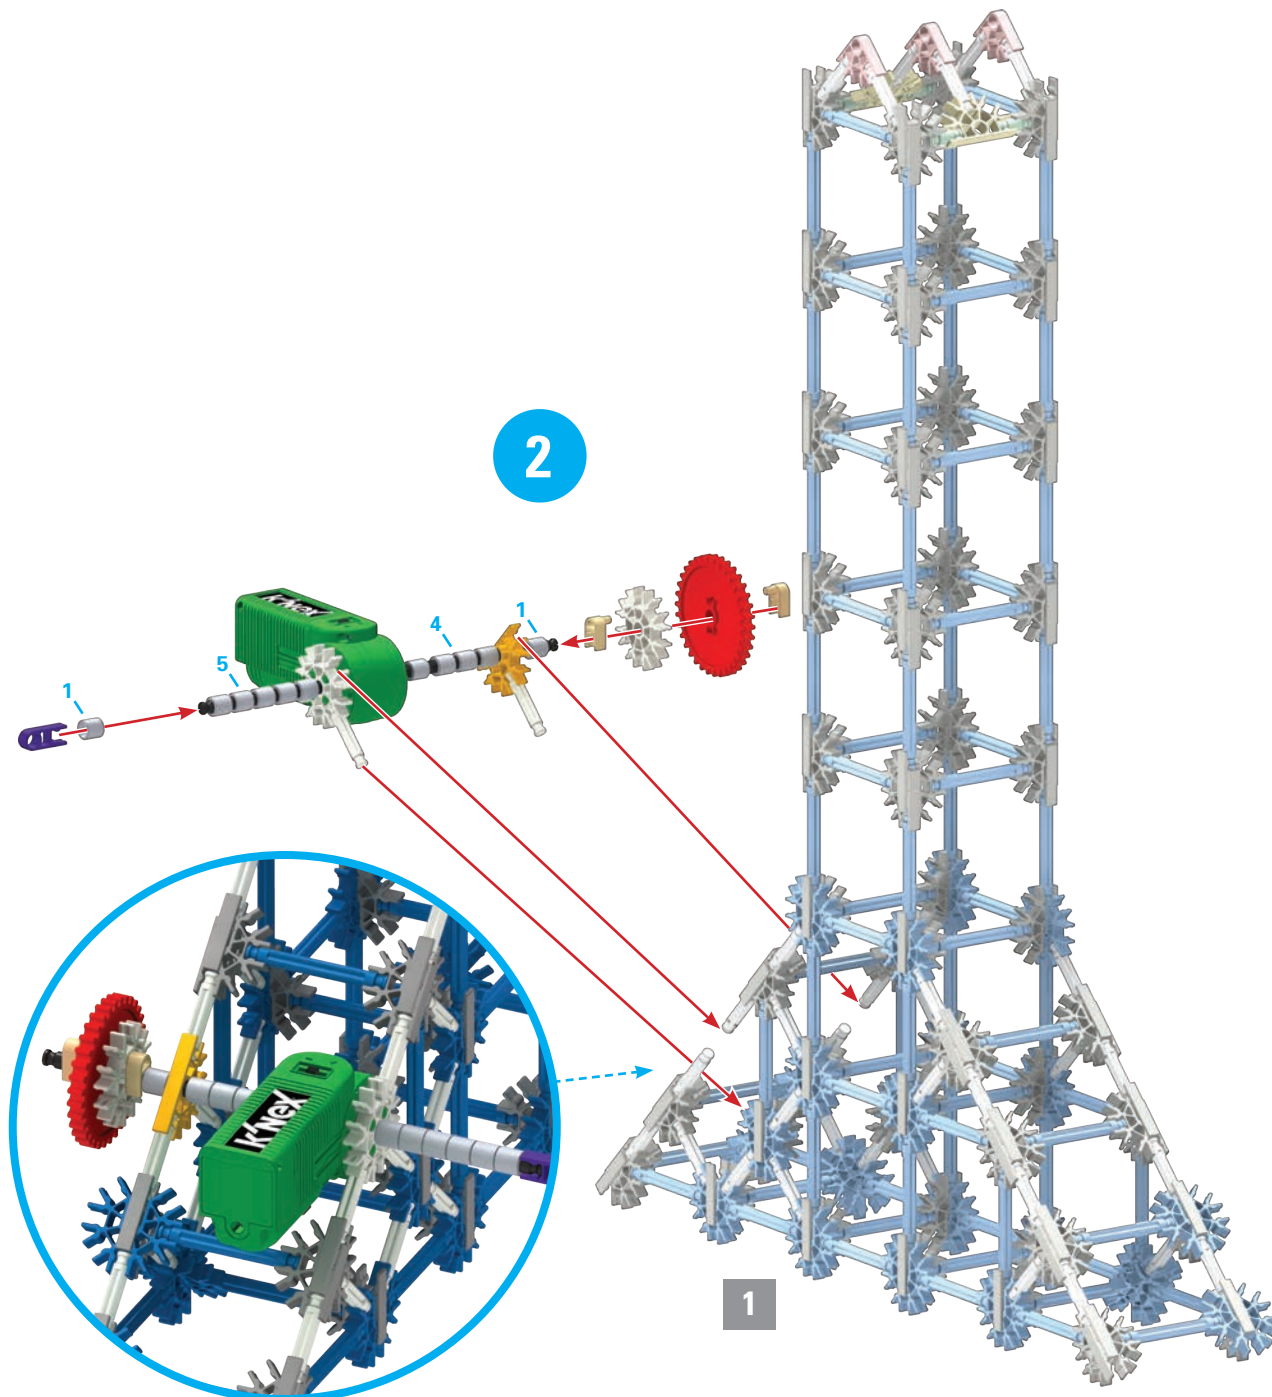


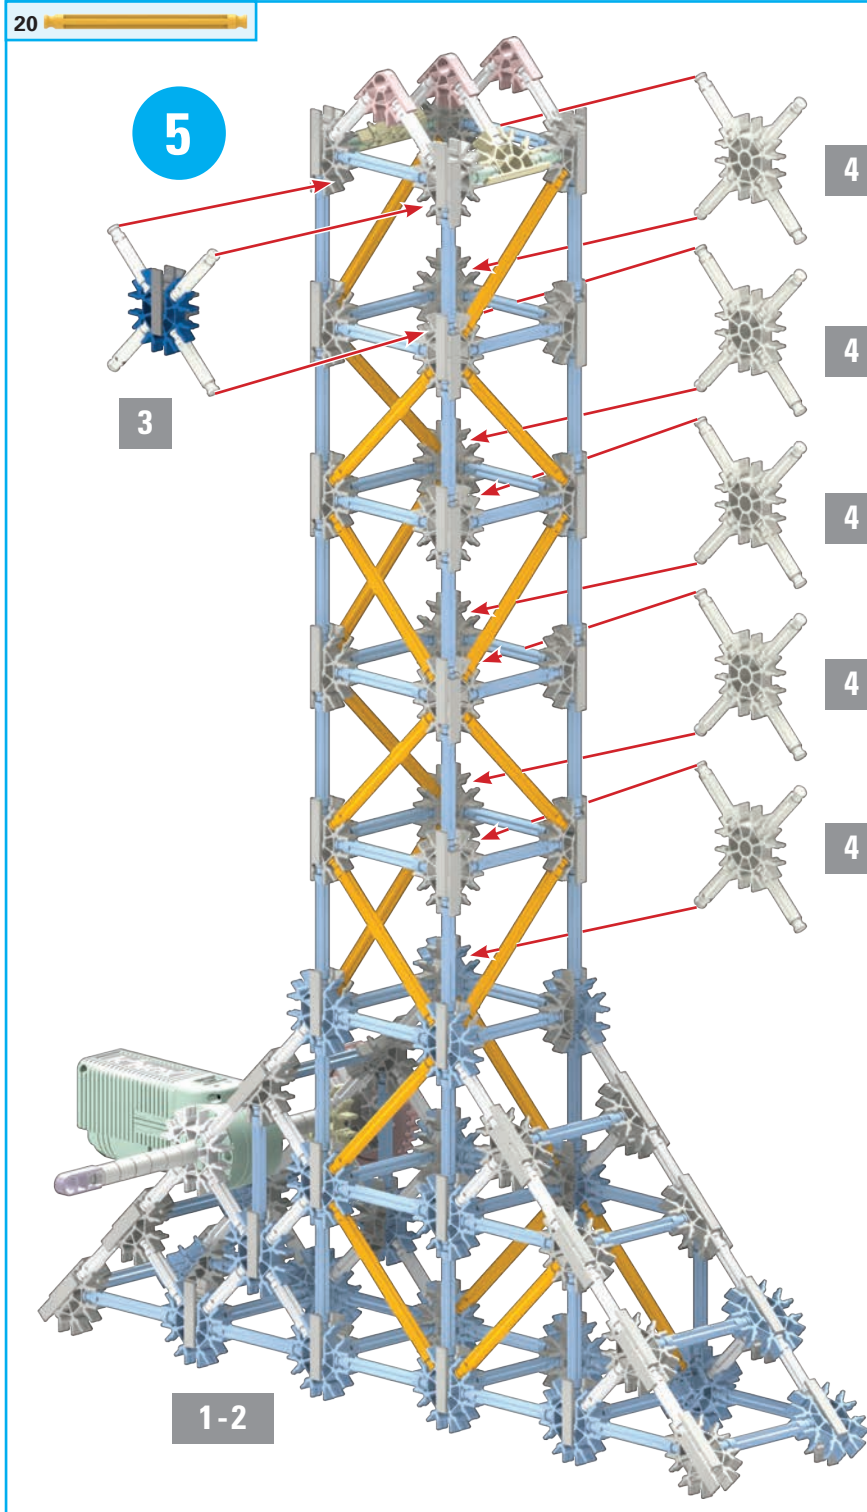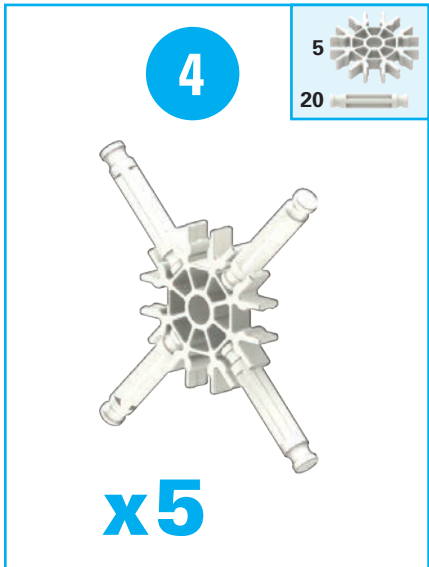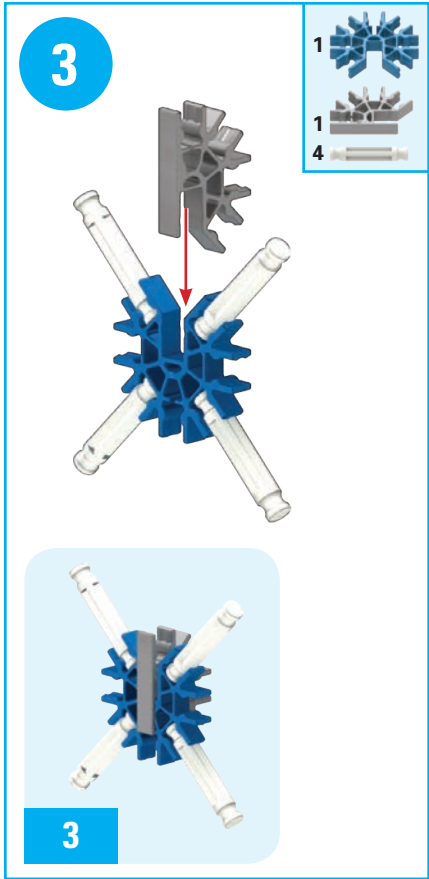



6

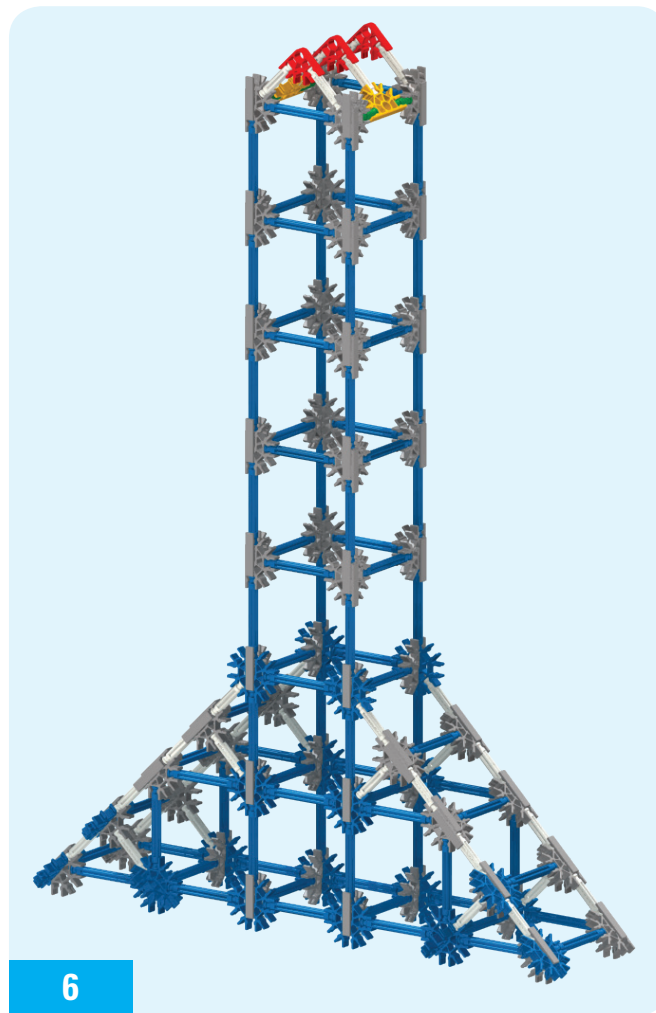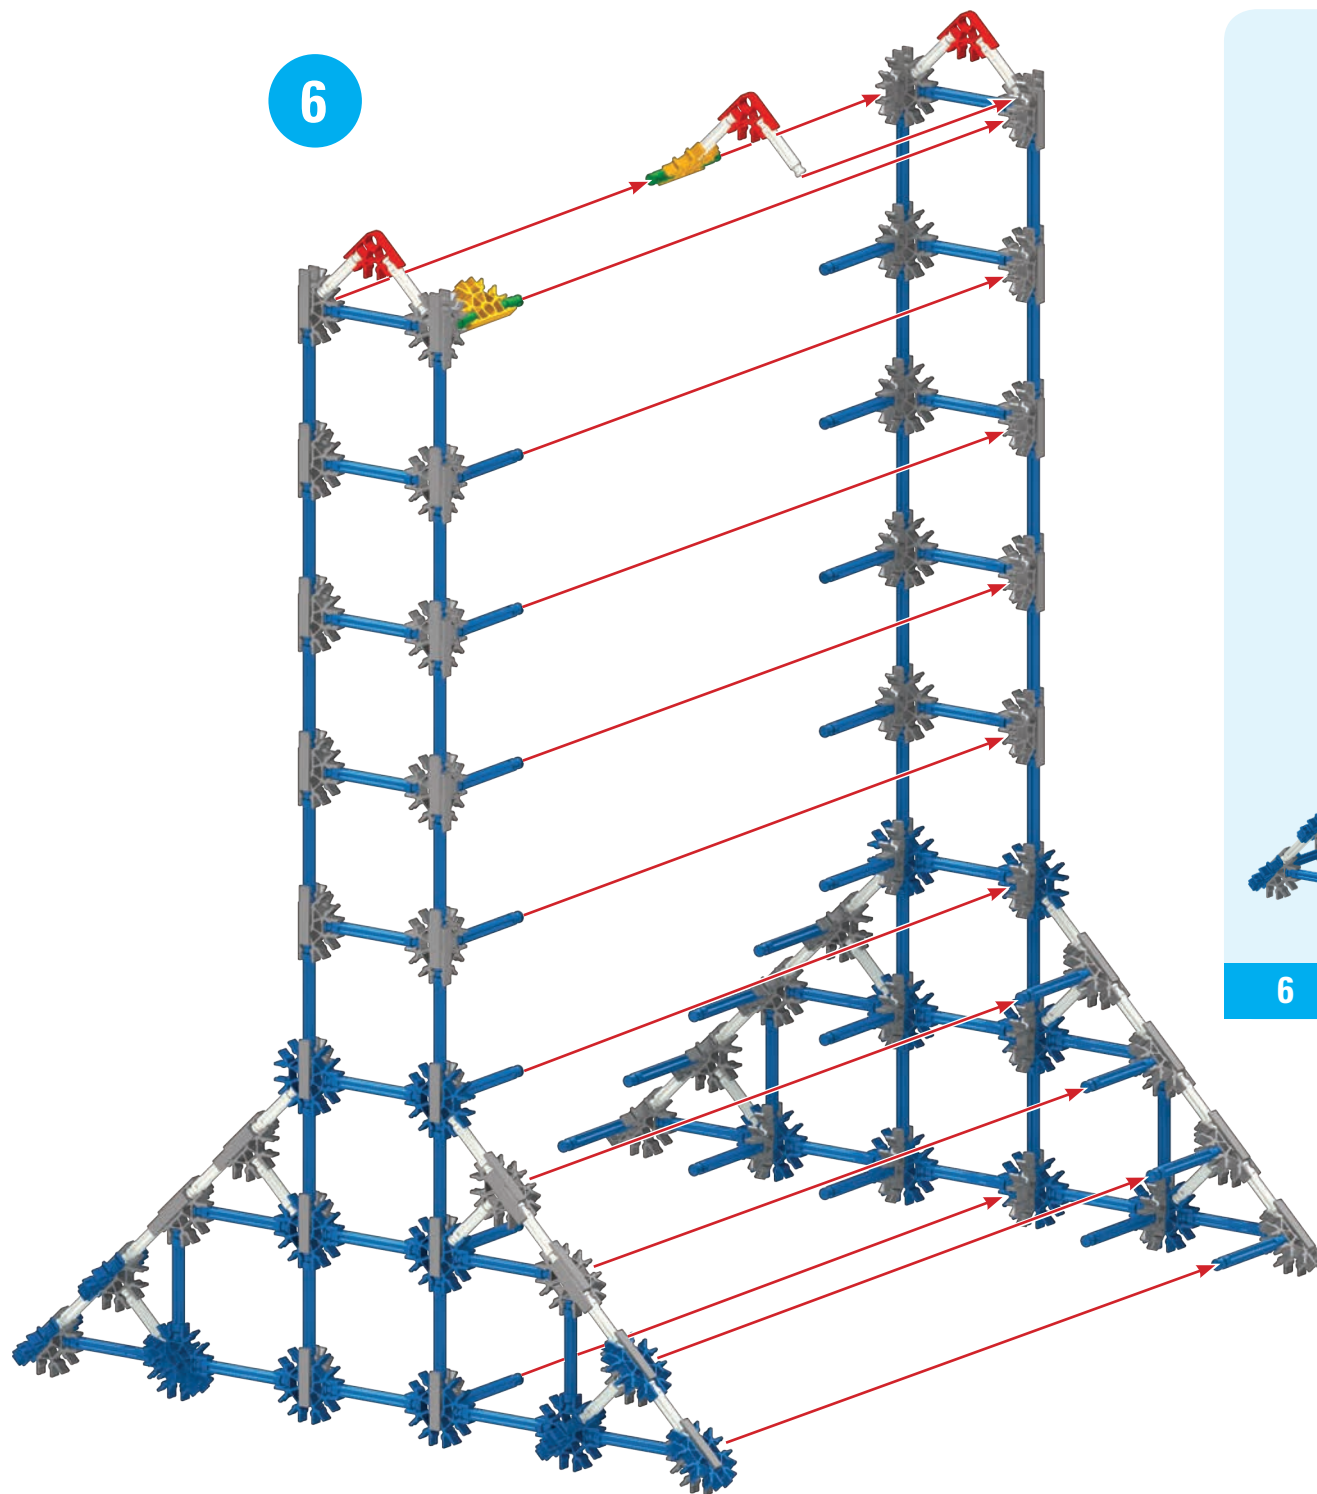  

3		22		2	
4					
30					
84		82			

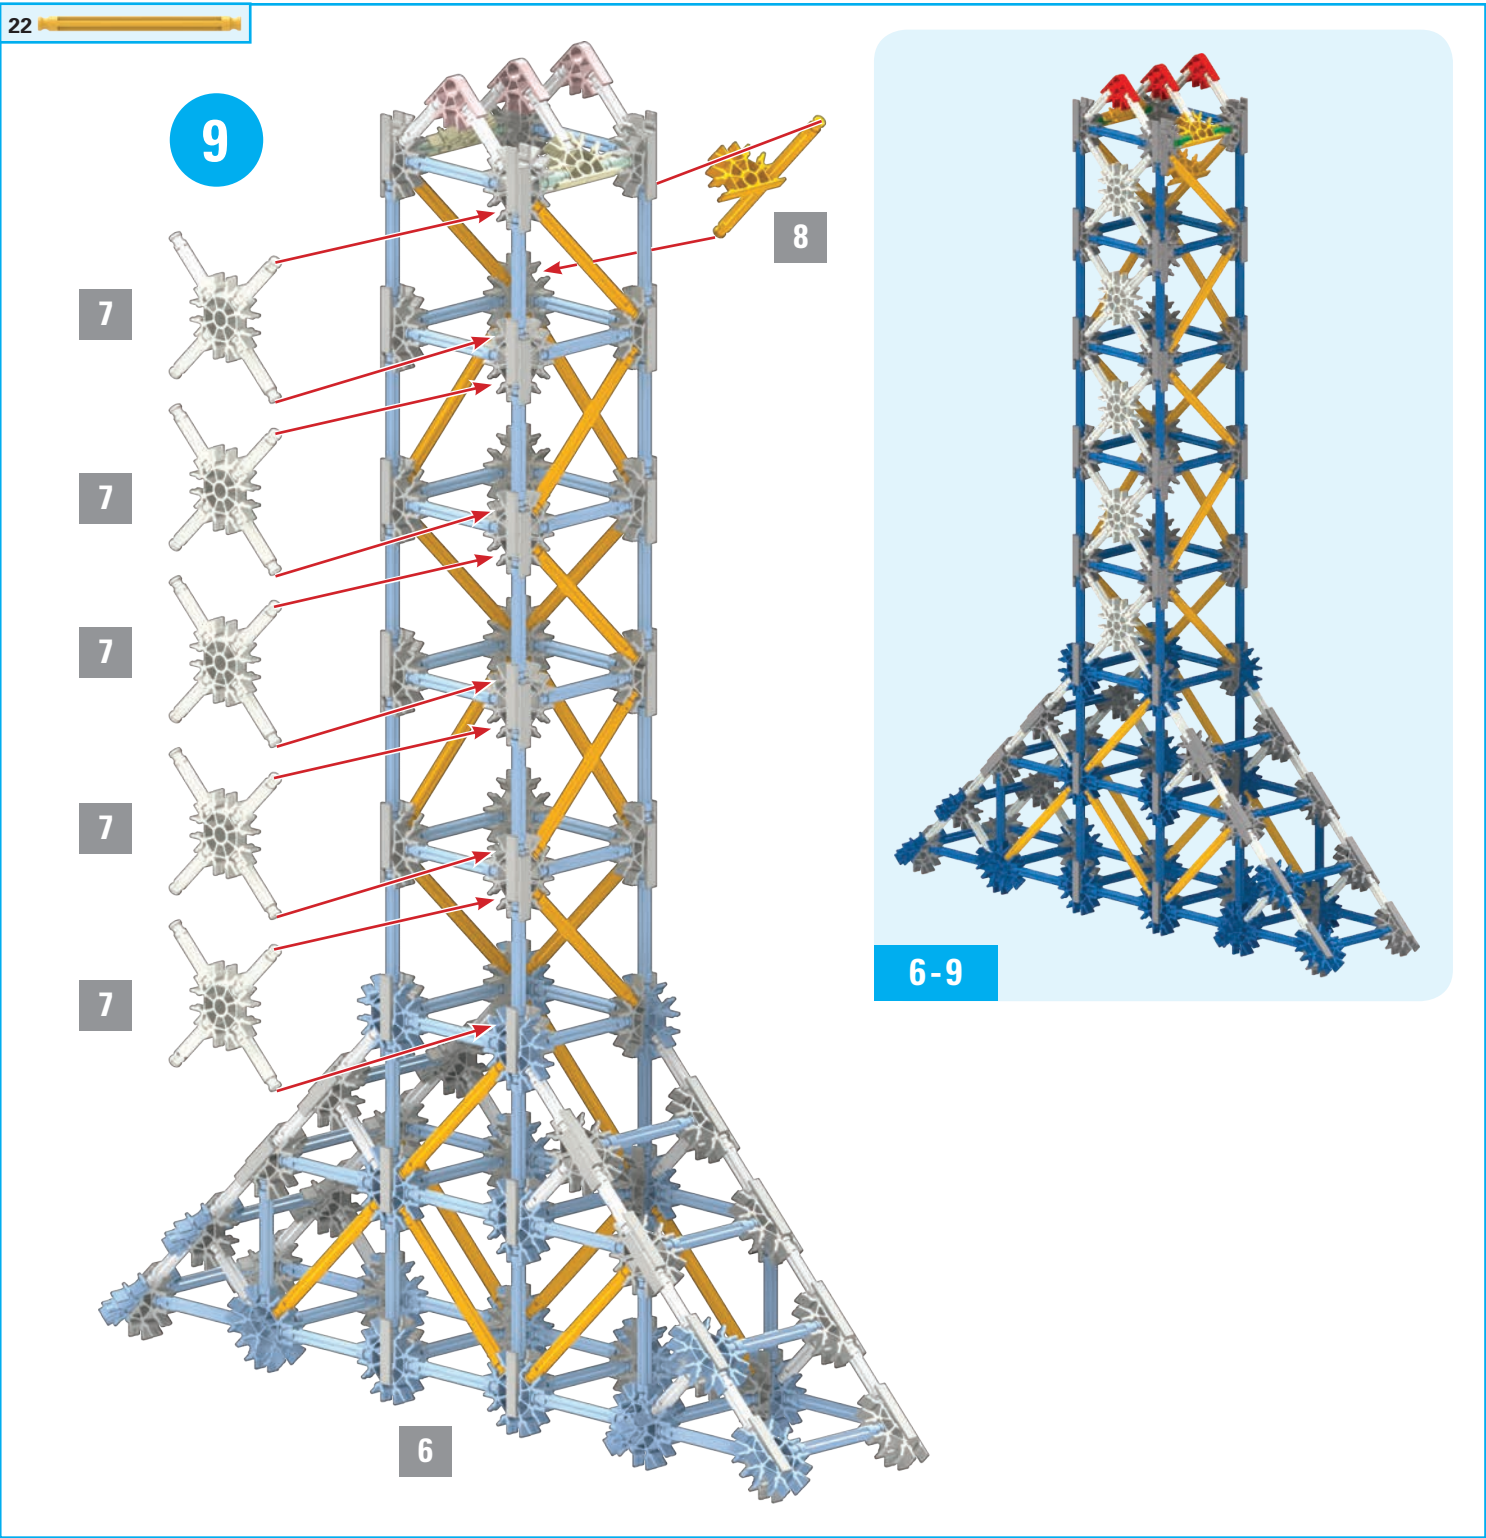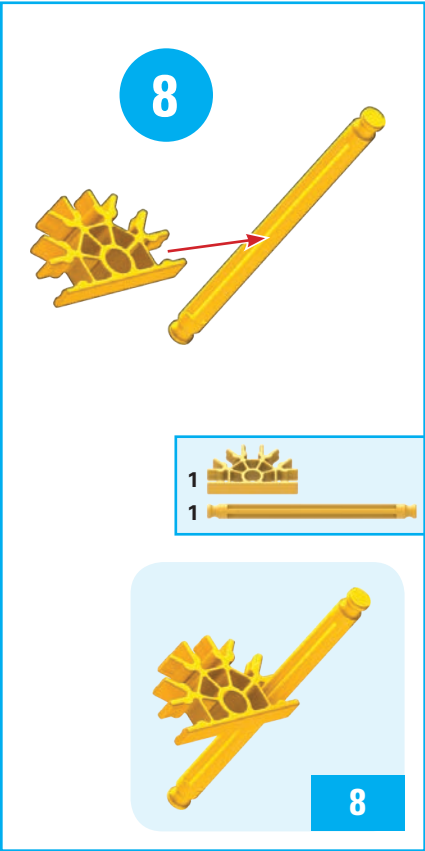
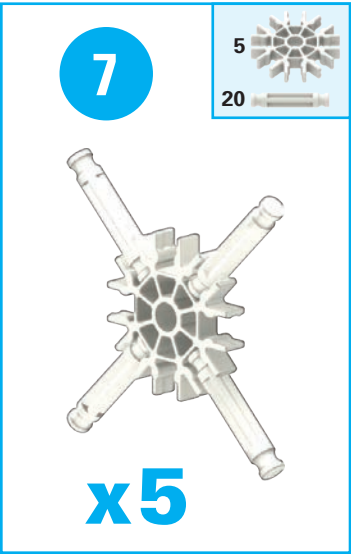


10

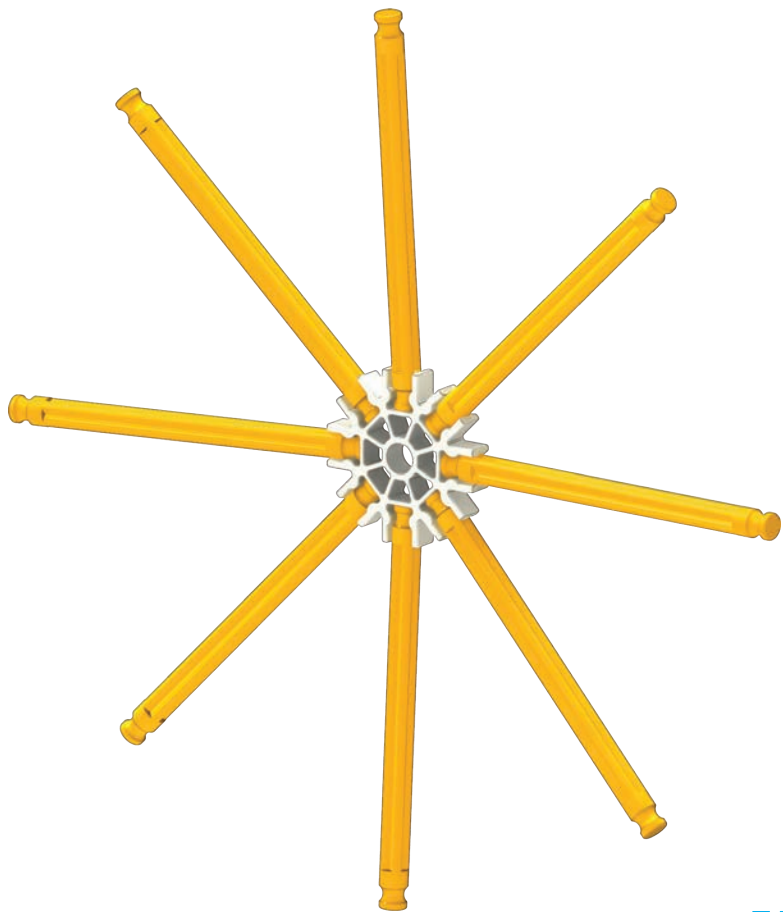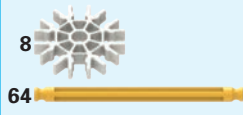

x8

11

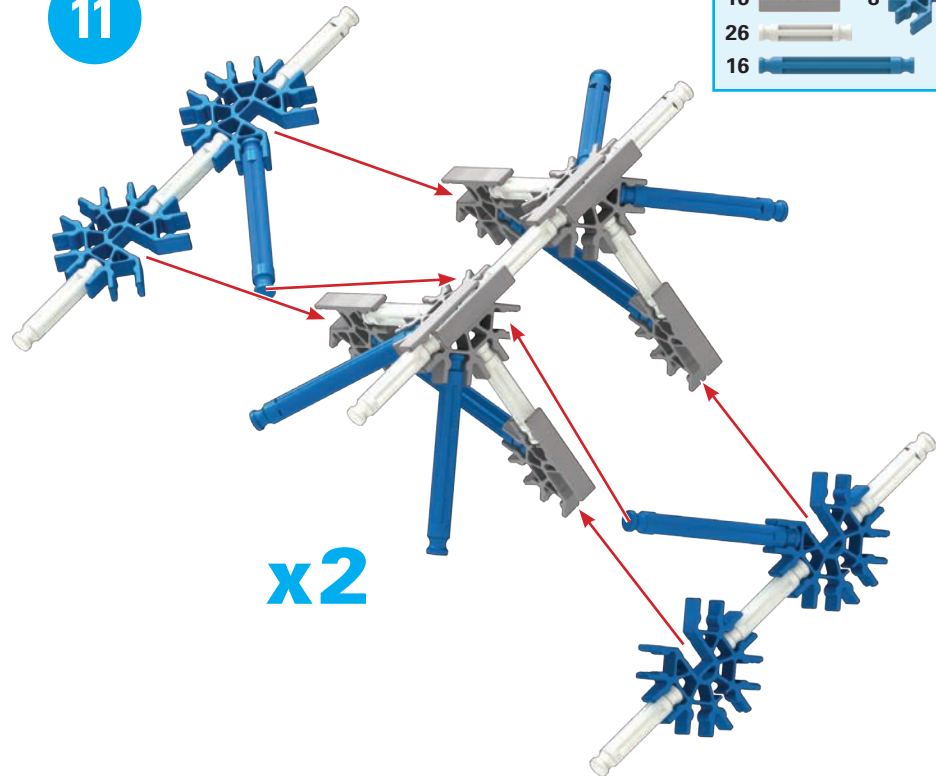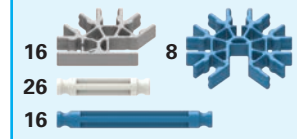


x2




11

x2

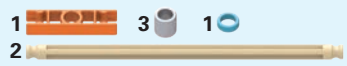


12

 
10

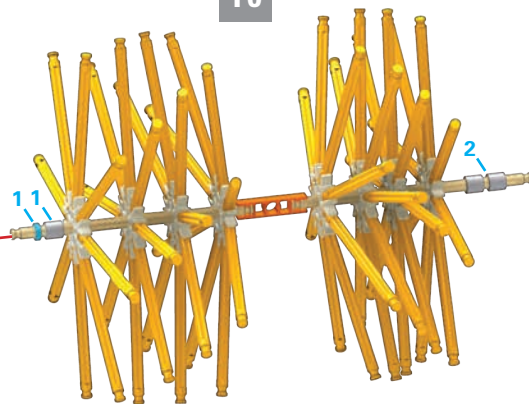


11

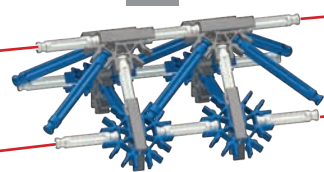 

1-5

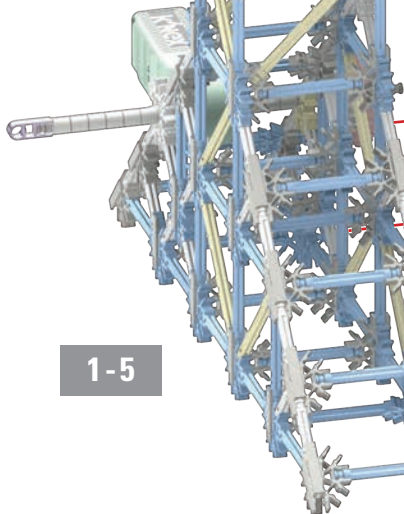 




11

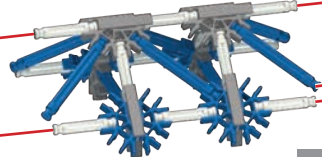 

6-9

   
1-12

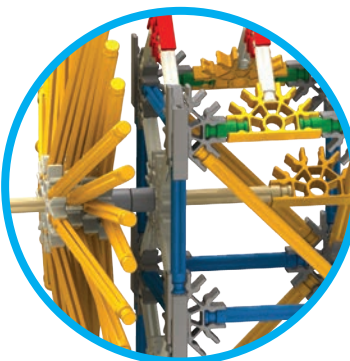

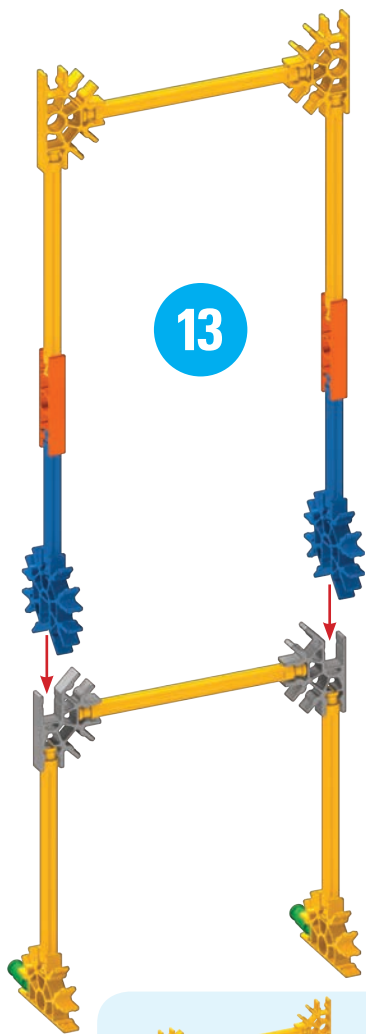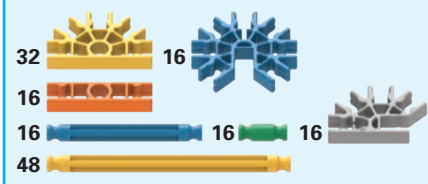



13

 x8

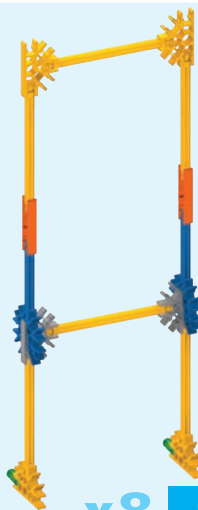





x8

 
 
13

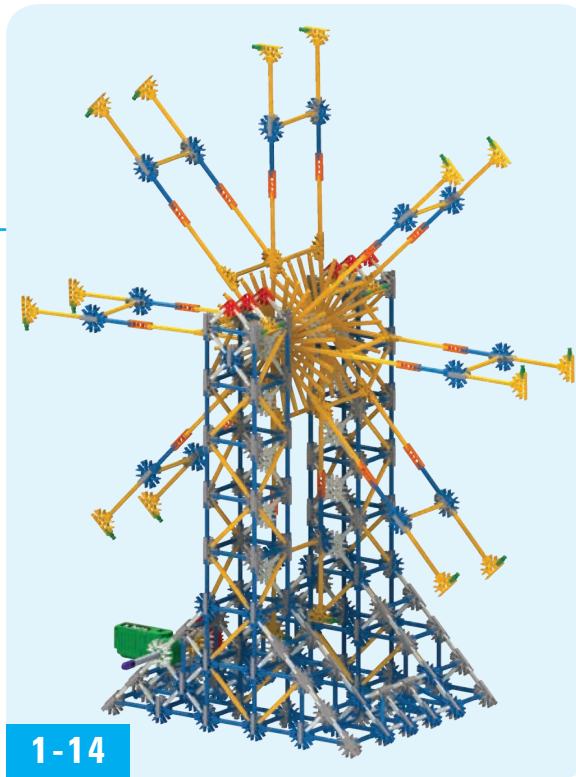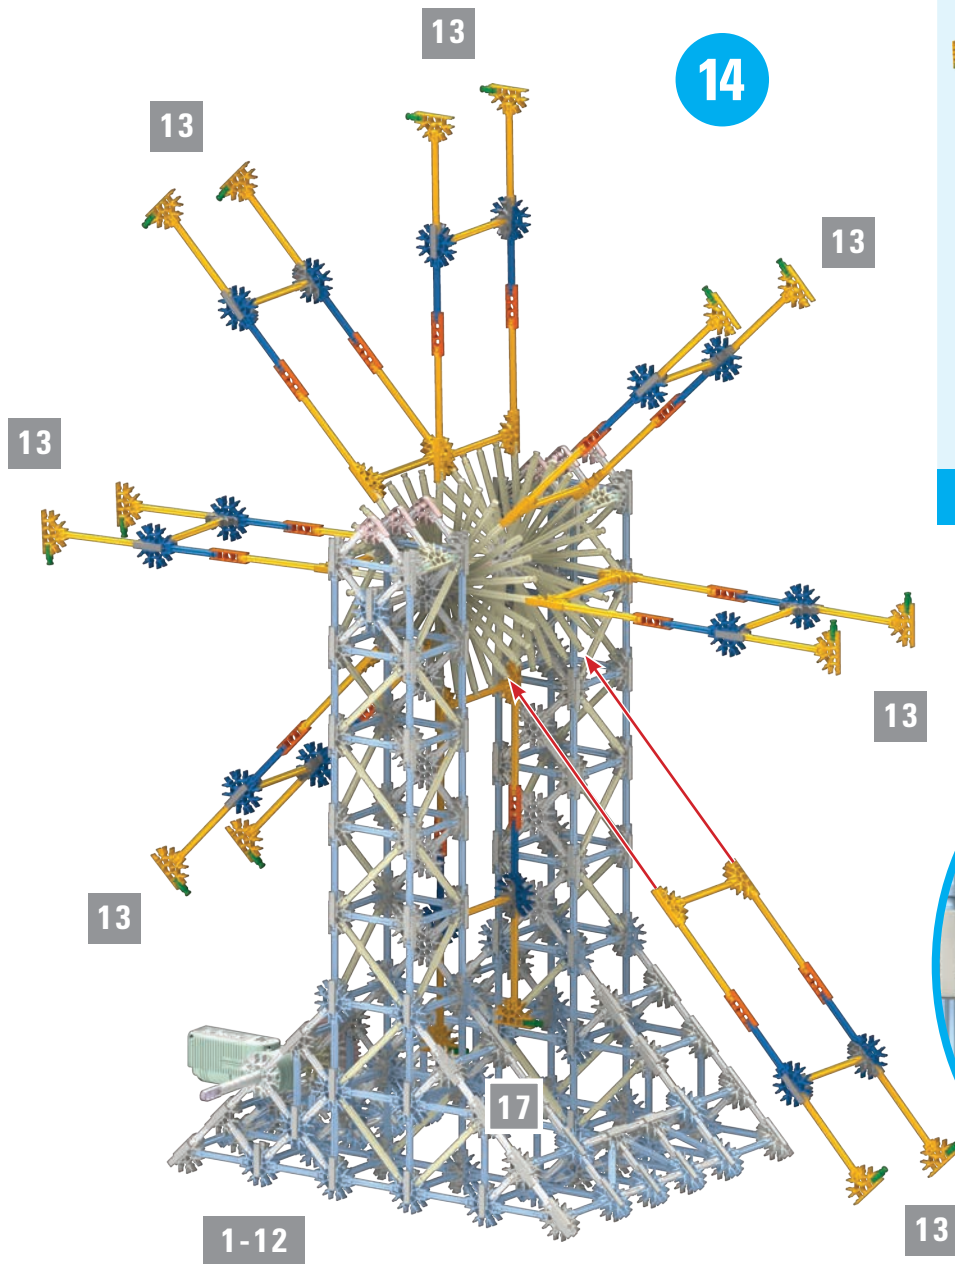





1-14

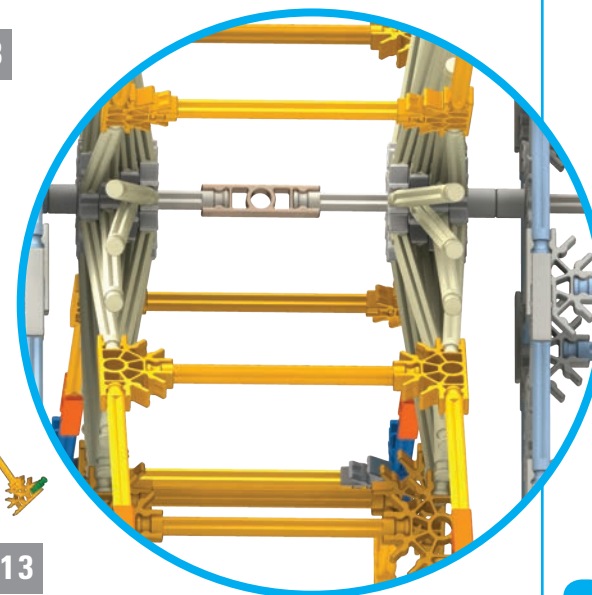 

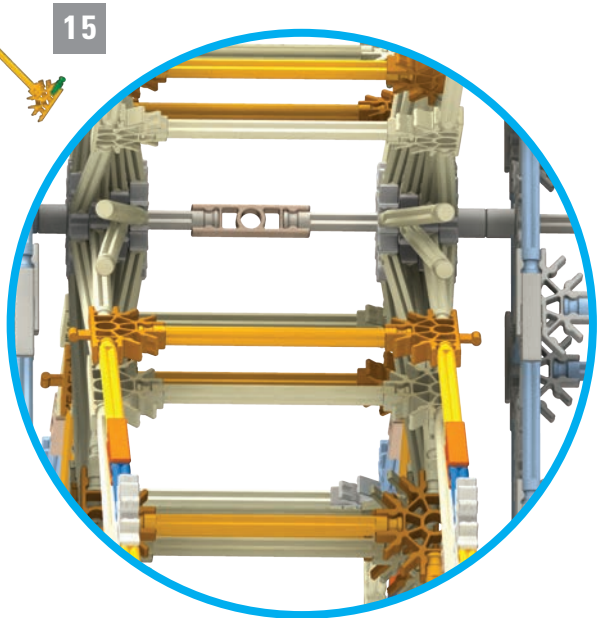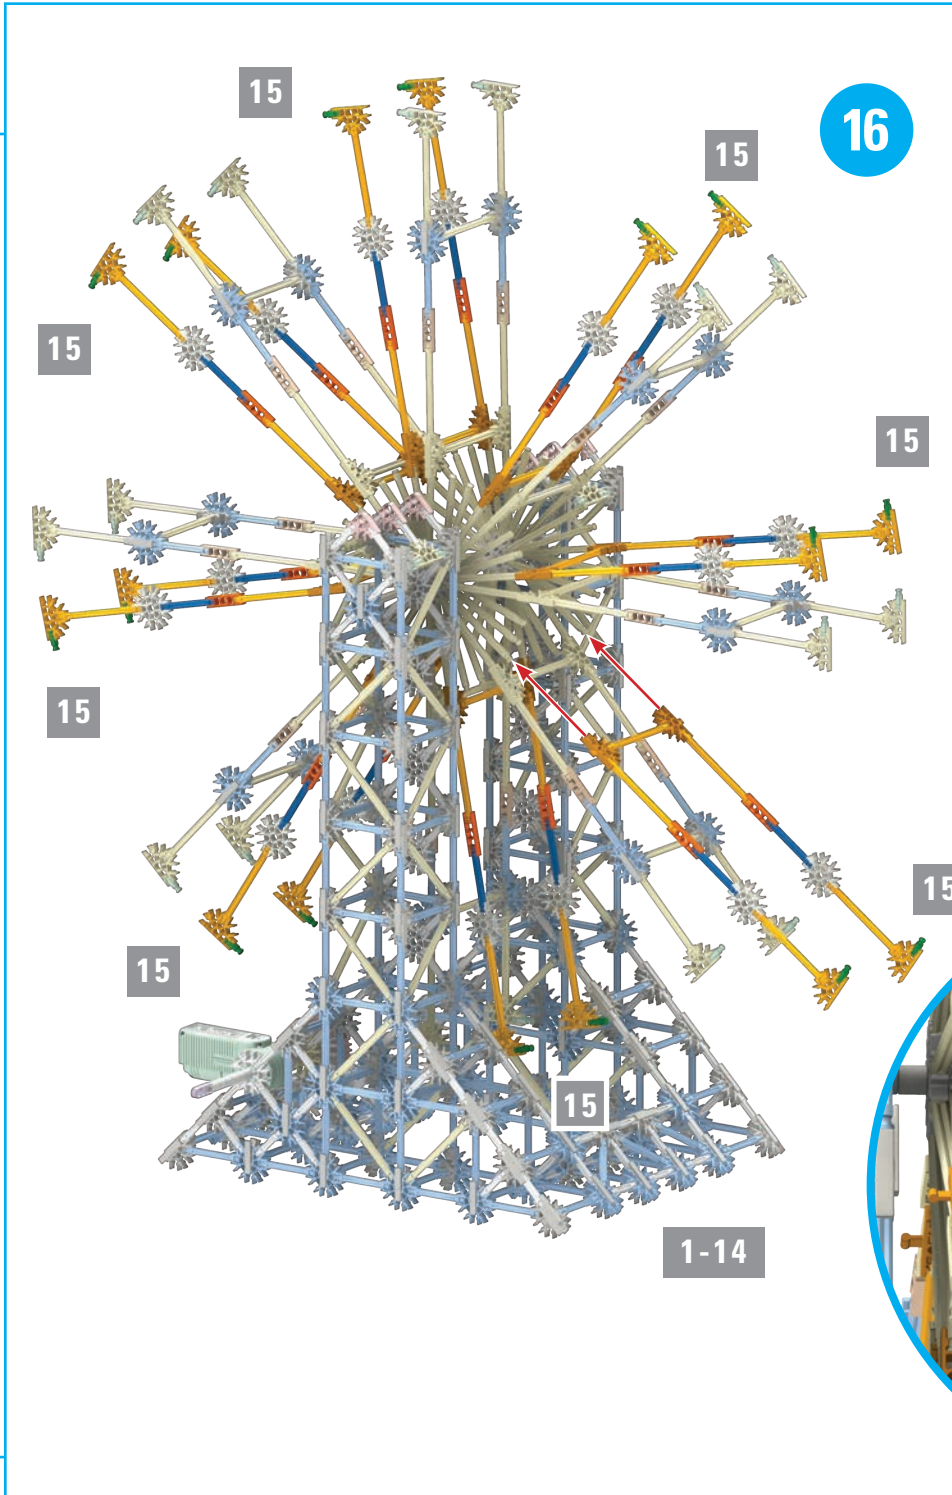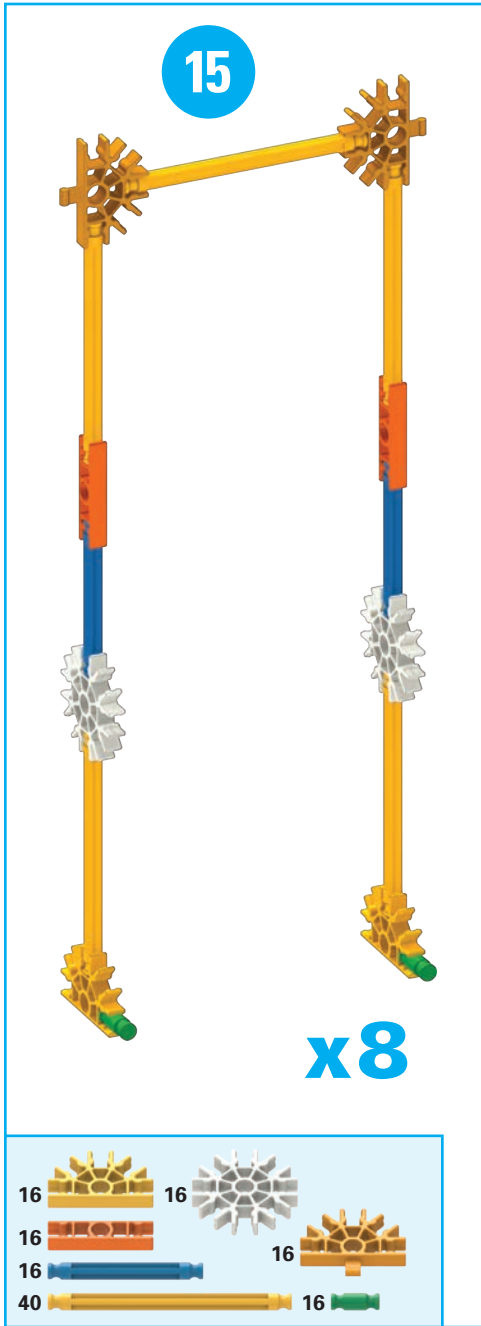   


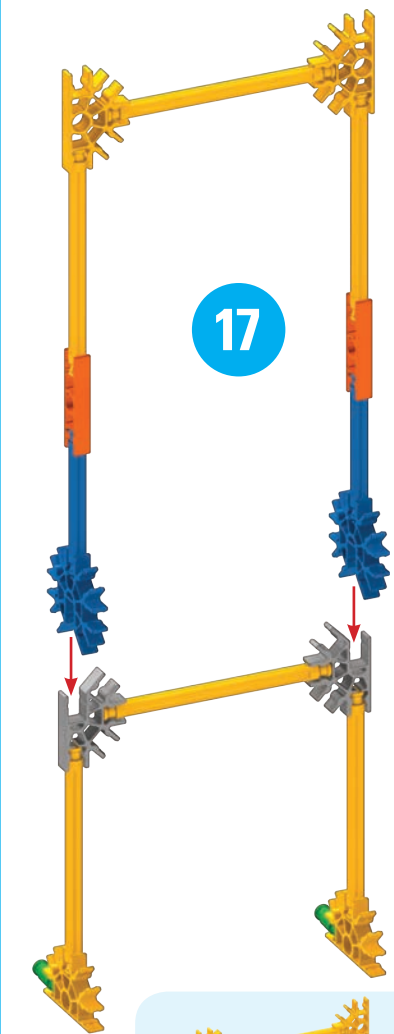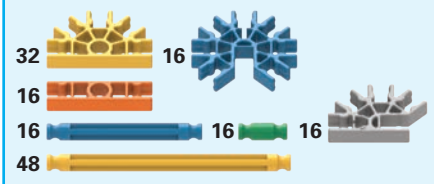  



x8

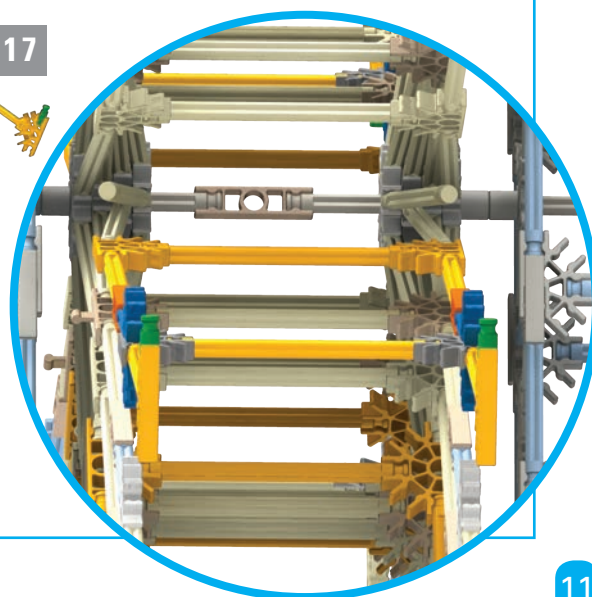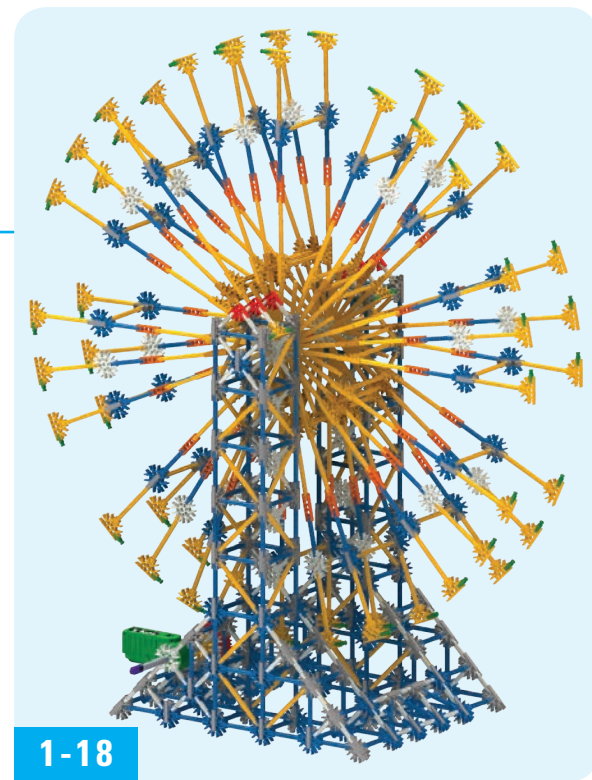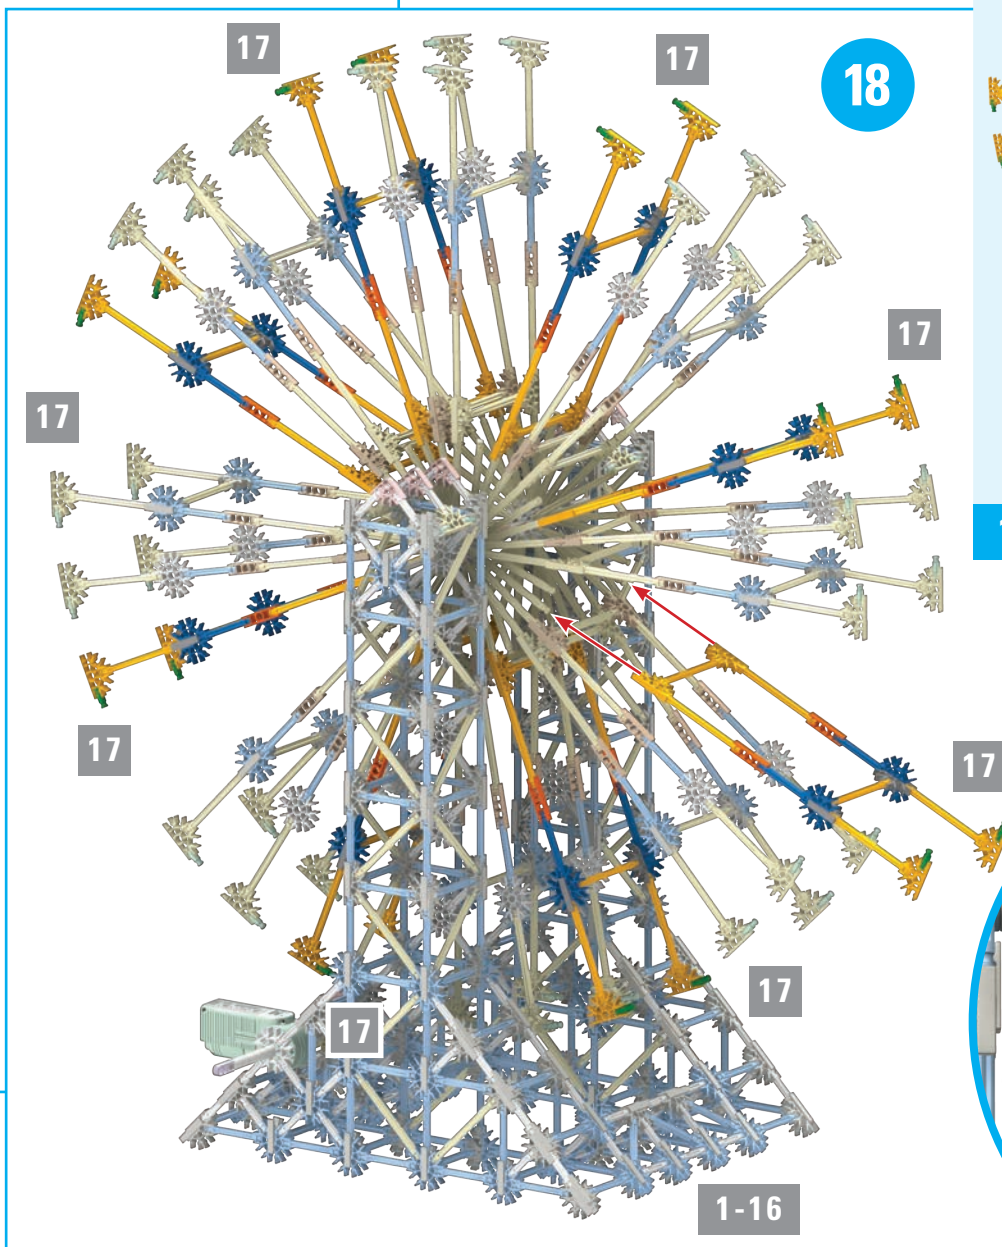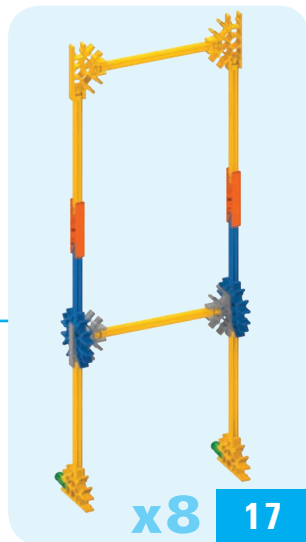    



19

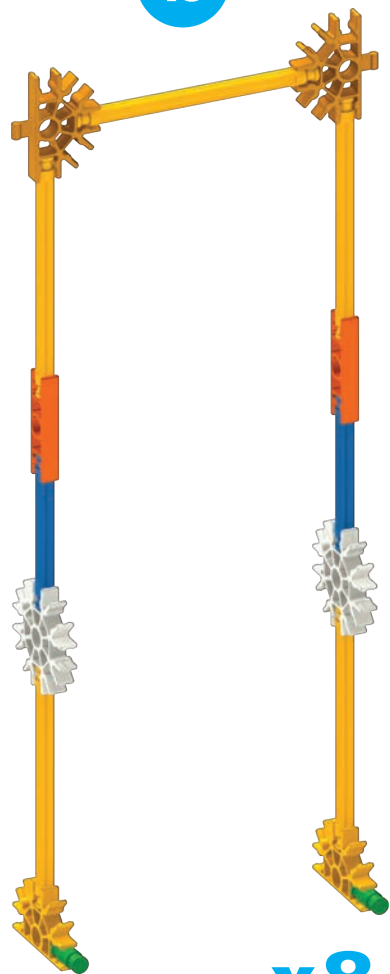 

x8


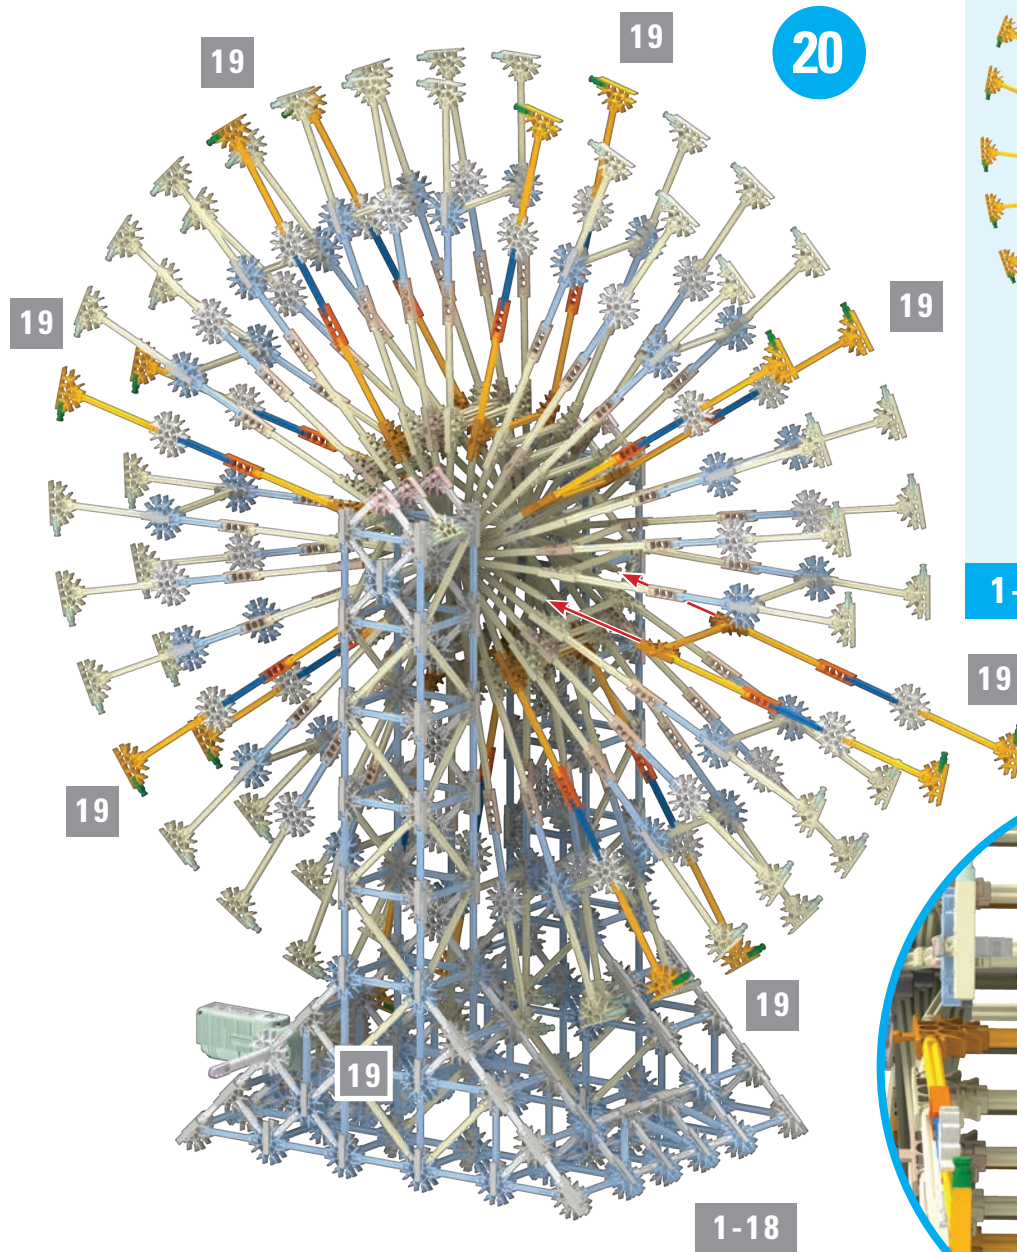 
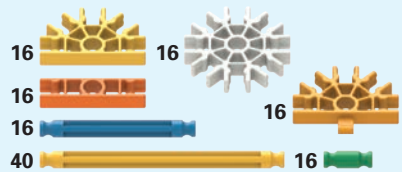 


20

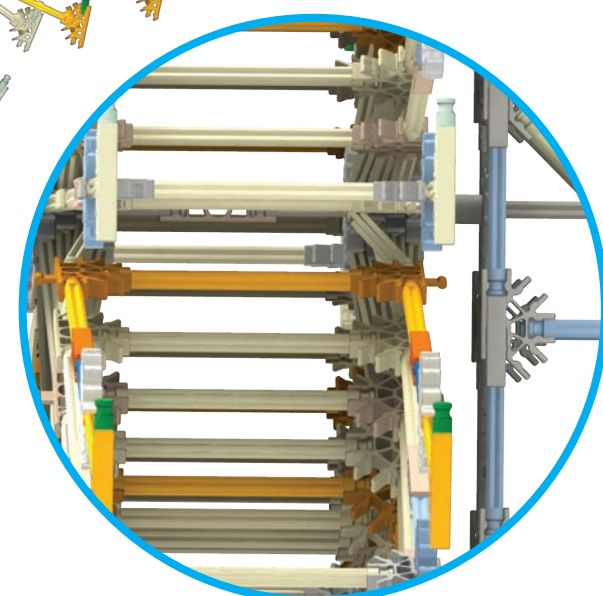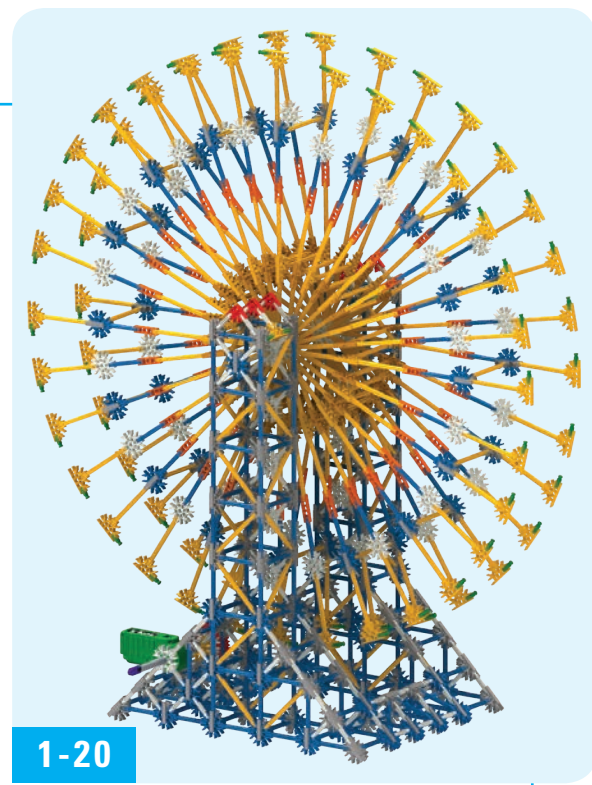  

21

   x13

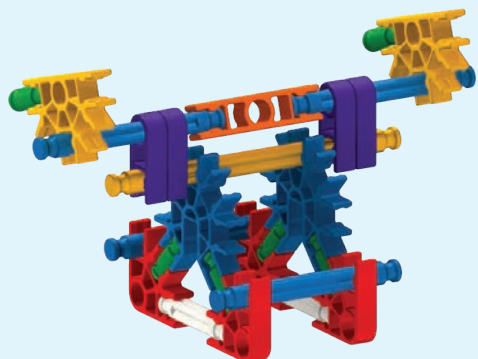
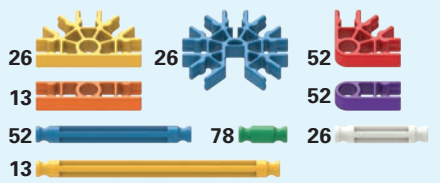
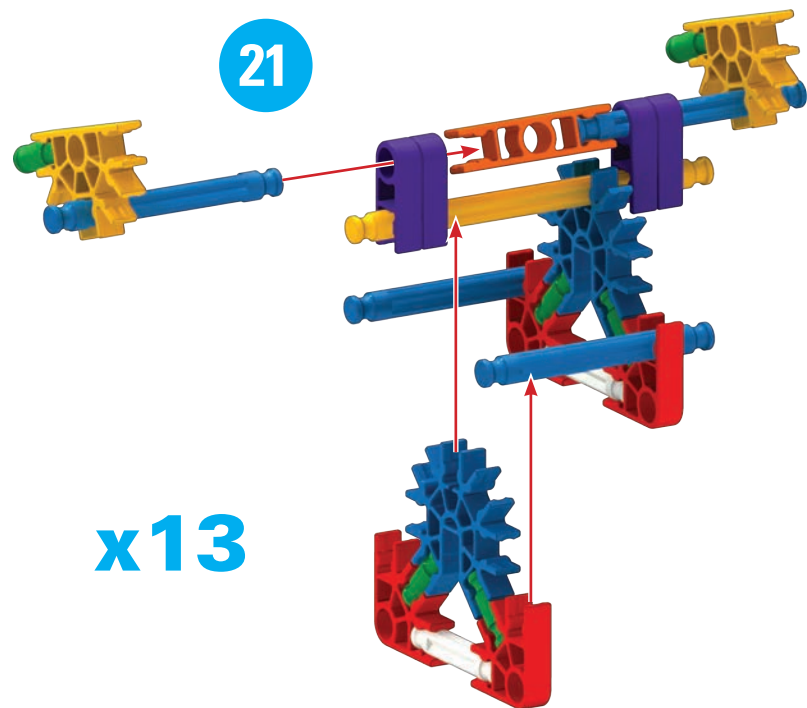


21

x13



22



x3

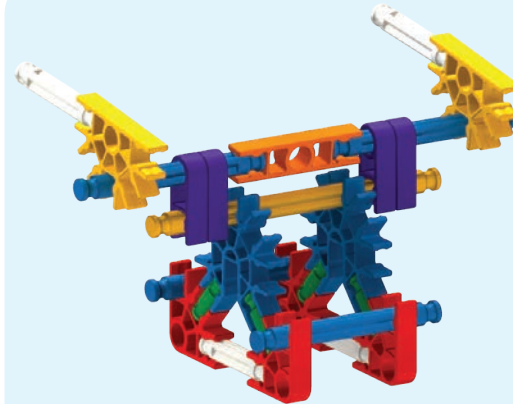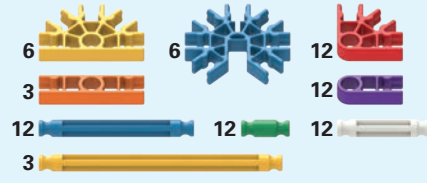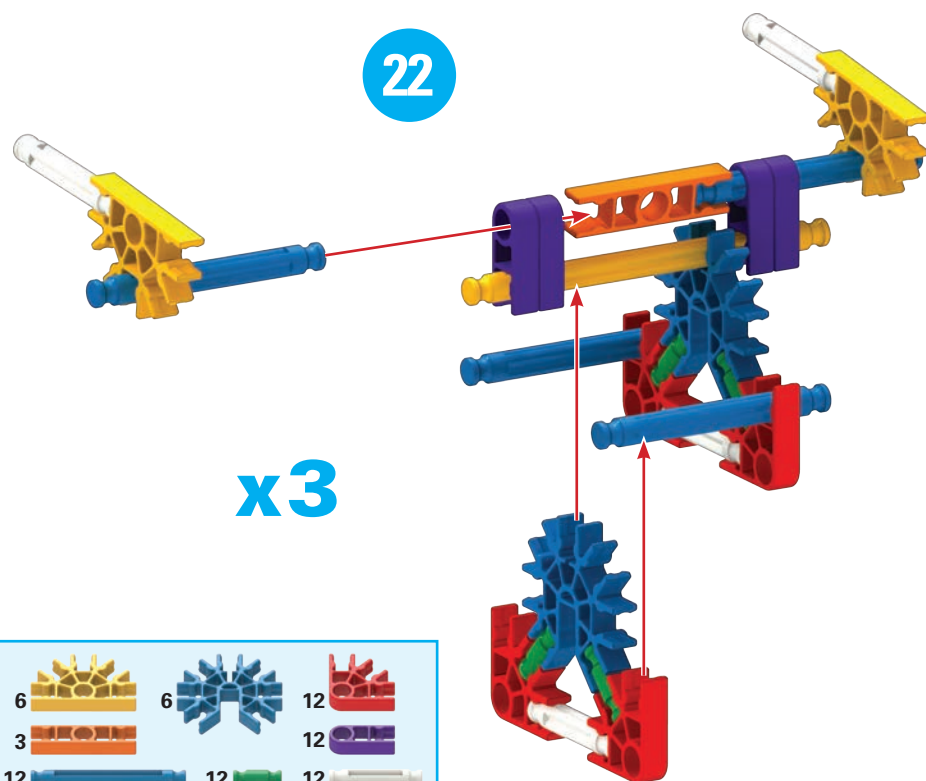

22

   x3

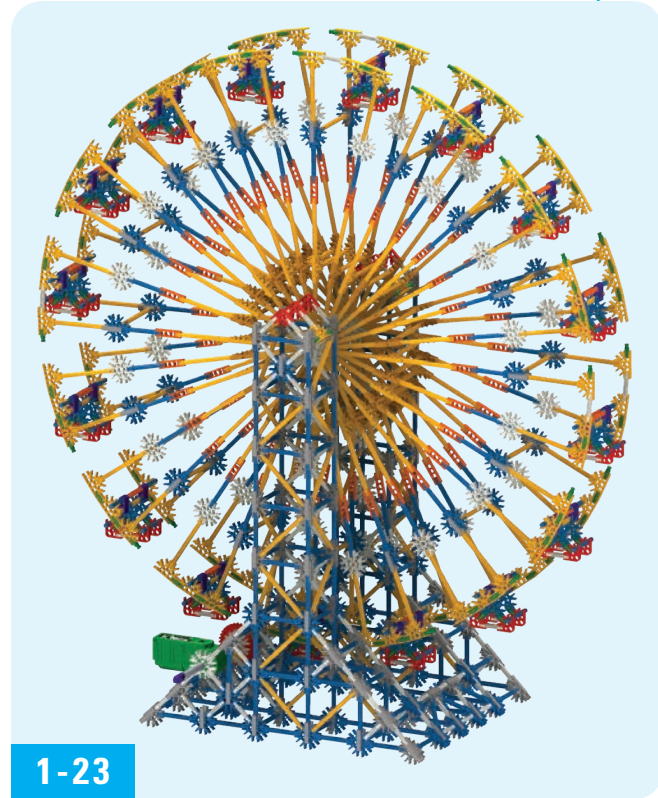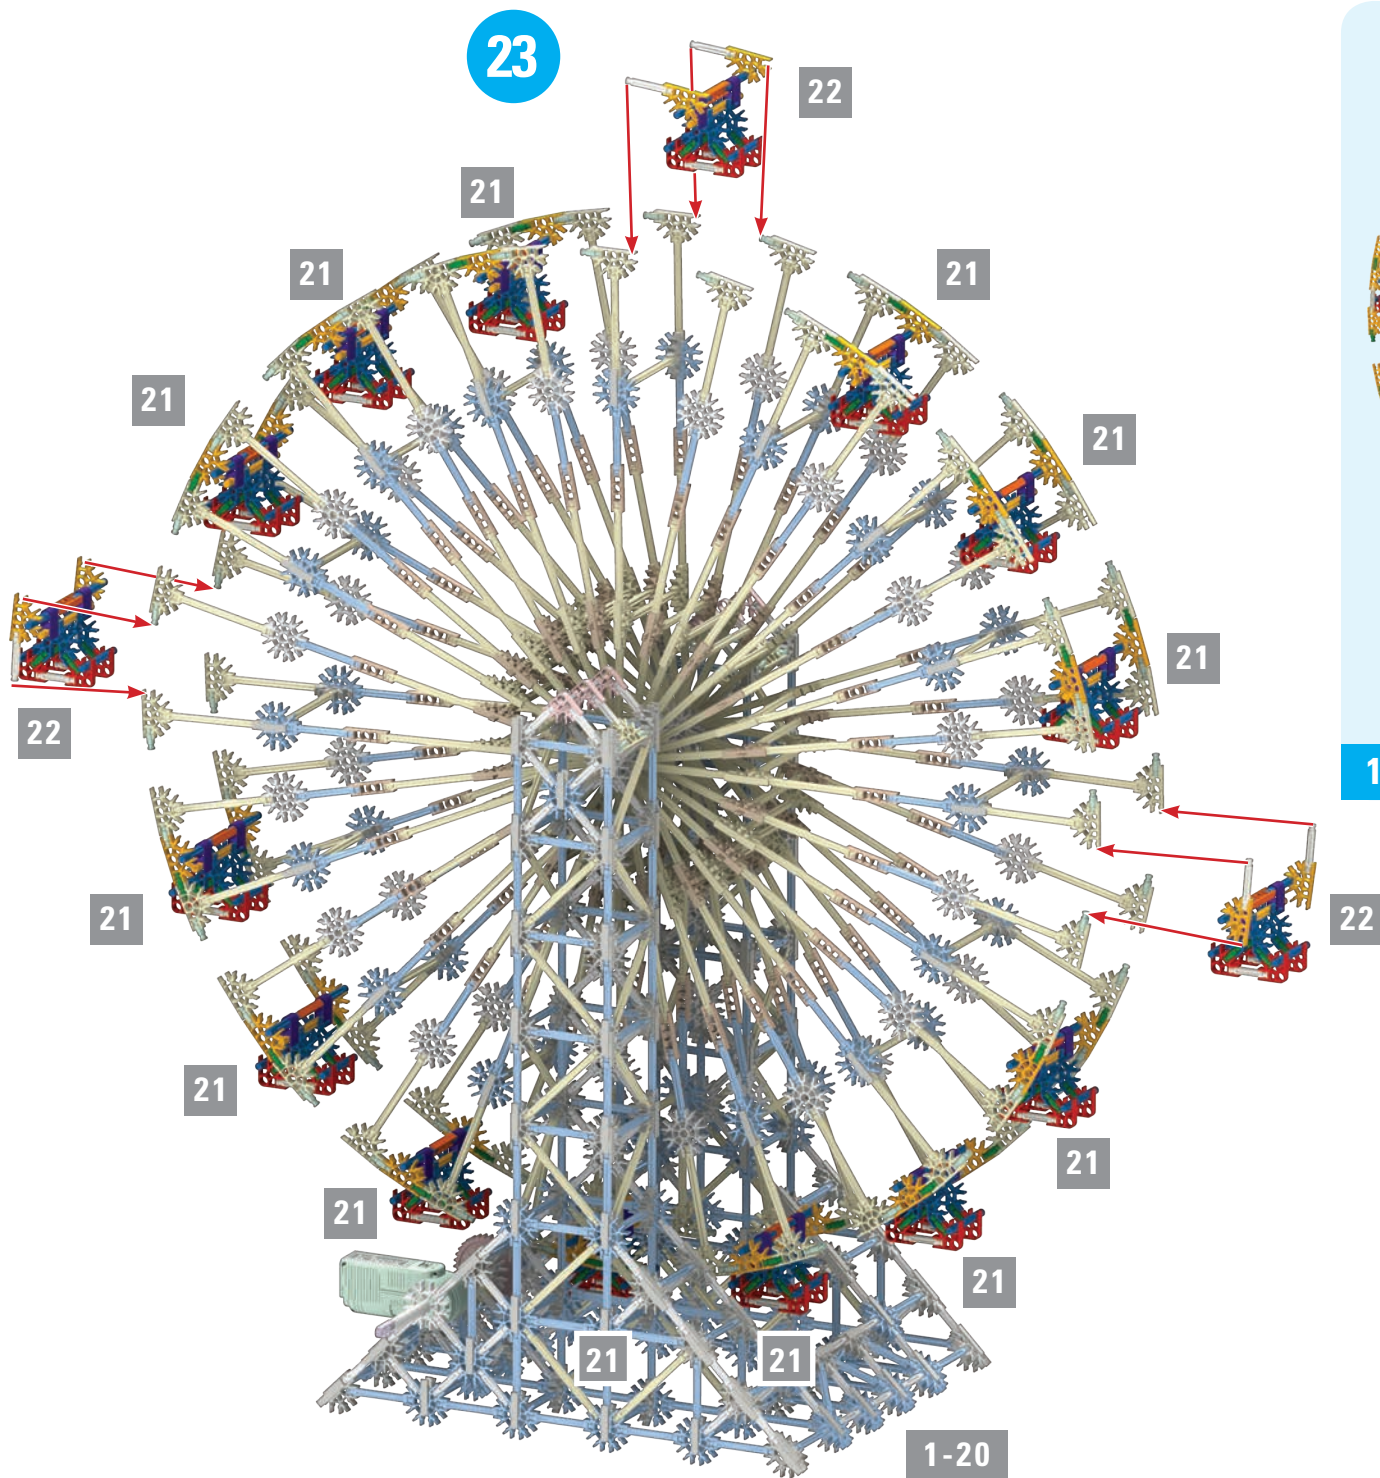


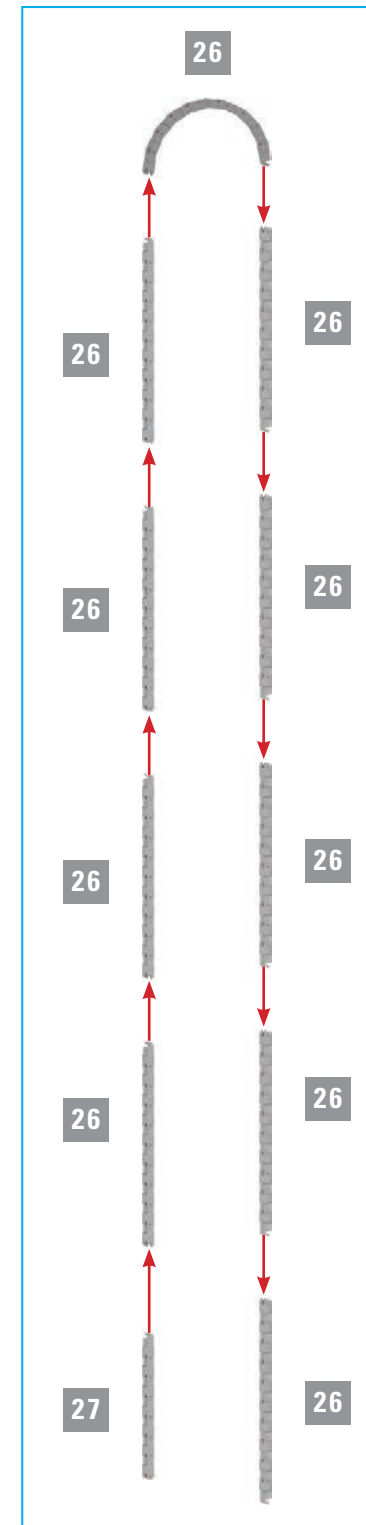




1 - 28

 Tip: Make sure the indents of the outside of the chain sit in the grooves of the red gear.

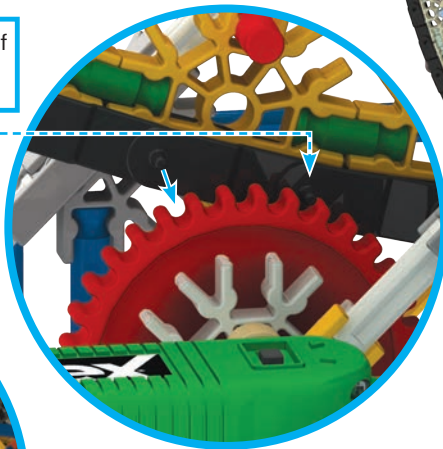

If the motor is not working properly:

 - Check to see if you have fresh batteries and that they are installed correctly.
- If it is still not working, call our Consumer Hotline at 1-800-KID-KNEX (USA and Canada only). See the back cover of the instruction book for other ways to contact K'NEX.

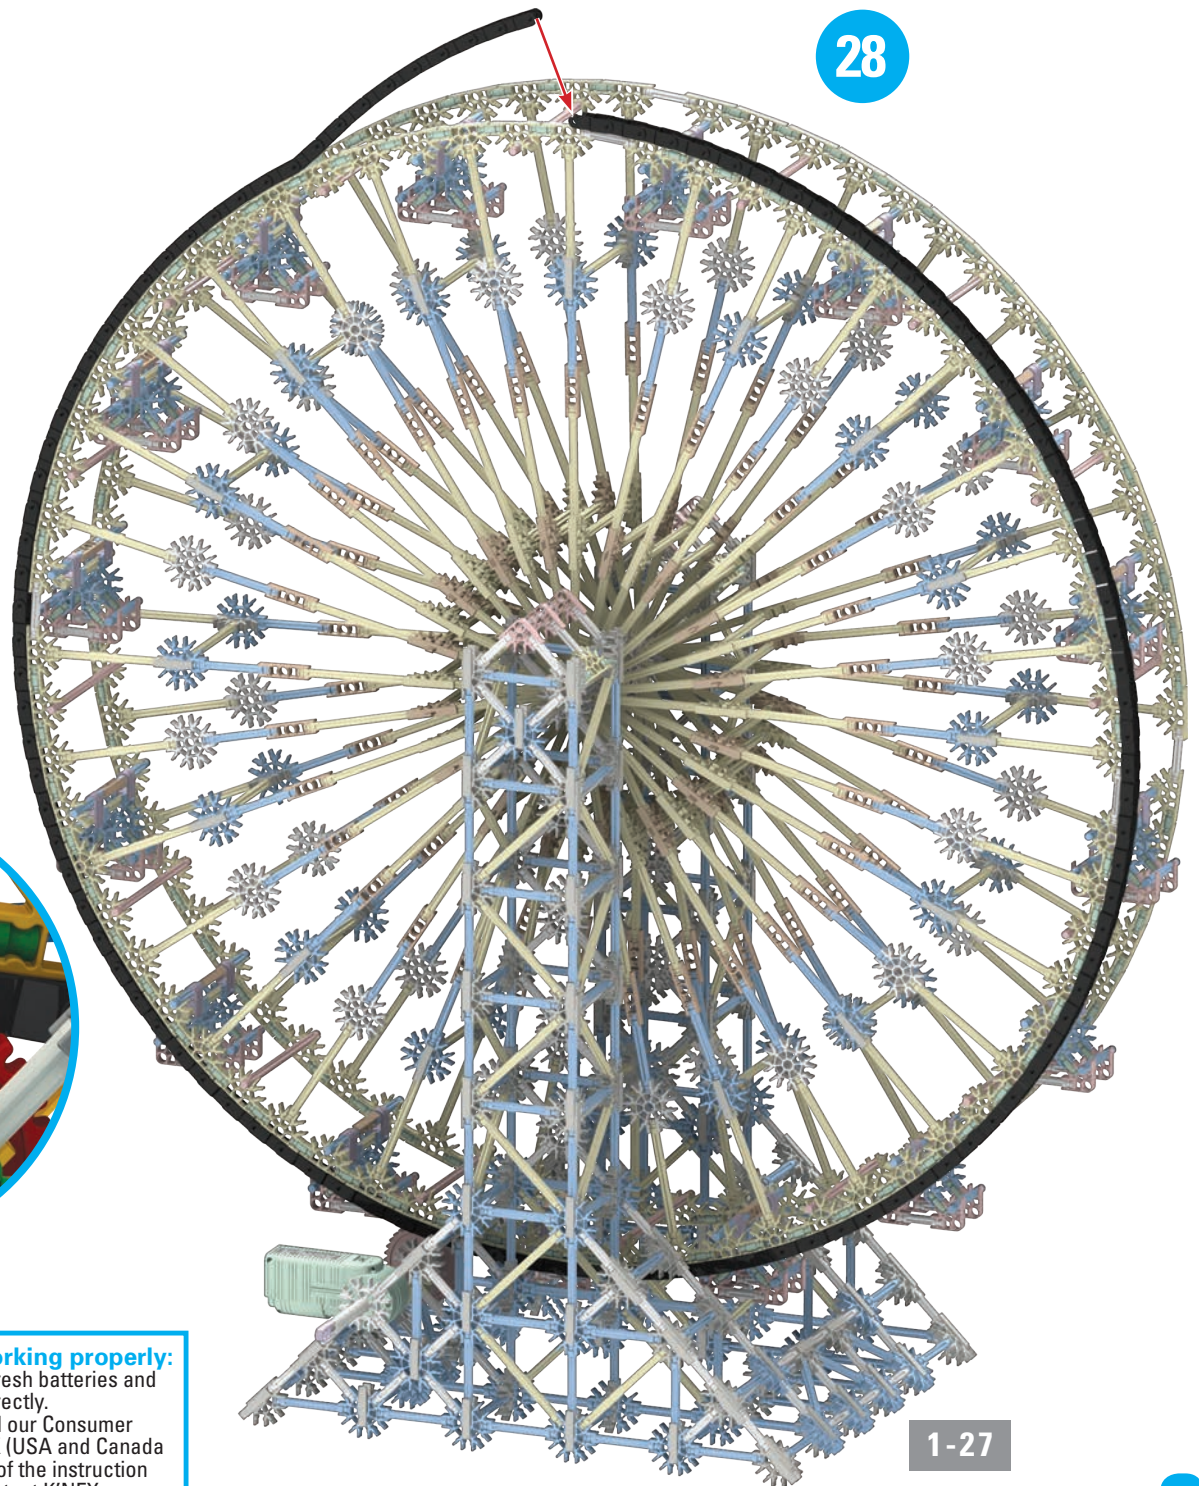

28

1-27