

Chromebook Parts List and Prices

Full Replacement schedule: (Full replacement cost for all machines is based on current model year Chromebook)

1st year of deployment = 100% full replacement cost

2nd year of deployment = 75% full replacement cost

3rd year of deployment = 50% full replacement cost

4th year of deployment and on = 25% full replacement cost

Discontinued models that are no longer deployable (used as loaners) = \$30

If water damage or physical damage still leaves significant usable parts, we will charge ½ full replacement price.

Prices are subject to change based on availability and cost of parts.

HP Fortis 11 G5 Chromebook (Middle School)

1. Display Part Number N85421 - **\$311.36**
2. TouchPad: Part Number N85025 - **\$83.56**
3. Front Camera: Part Number N91928 - **\$86.16**
4. Back Camera: Part Number N85030 - **\$100.07**
5. Touch Controller: Part Number N91925 - **\$99.88**
6. Stylus: Part Number M47241 - **\$138.59**
7. Speakers: Part Number N91922 - **\$84.97**
8. Hinges: Part Number N85031 - **\$98.59**
9. Battery: Part Number N85035 – **\$132.69**
10. Keyboard: Part Number N1069 **\$130.65**
11. MotherBoard: Part Number N84325 - **\$530.48**
12. New Charger: **\$25**

Max Price/Replacement:

Asus CR1204CTA Chromebook (High School)

1. Display: Part Number CR1204FTA-2A **118.72**
2. TouchPad: CR1204CGA-1A **\$7.75**
3. Front Camera: CAMERA HD FIX 3.3V **\$7.80**
4. Touch Controller: CR1204CTA TOUCHPANEL **\$11.91**
5. Speakers: BR1104CGA SPEAKER BOX **\$4.35**
6. Hinges: BR1104CGA HINGE **\$5.13 Per Hinge**
7. Battery: C490F BATT/COS POLY/C31N2005 **\$36.36**
8. KeyBoard: CR1204CTA-2A K/B_(US)_MODULE **\$30.66**
9. Top Cover: CR1204CGA-1A LCD COVER ASSY(TOUCH) **\$11.89**
10. New Charger: **\$25**

Max Price/Replacement: